



EMB-120

OVERHAUL/REPAIR CAPABILITY LIST



EMB-120 | Overhaul/Repair Capability

Part Number	Description
10-1110-3	EMERGENCY EXIT SIGN
10-1110-5	EMERGENCY EXIT SIGN
10-1119-1	INTERNAL EMERGENCY LIGHT
120-31220-003	MULTI ALARM PANEL
123-02328-401	STEERING HANDWHEEL
123-02328-403	STEERING HANDWHEEL
18-994	AEROSPACE LIGHT INVERTER
18-996	AEROSPACE LIGHT INVERTER
22201T011400	ALT. ELECTRONIC CONTROL
23080-013	STARTER GENERATOR
30-0191-7	LEFT NAV LIGHT
30-0191-8	RIGHT NAV LIGHT
30081-001	DC GENERATOR
30-0876-9	WING LIGHT (ANTICOLLISION)
30-1192-5	TAIL LIGHT (ANTICOLLISION)
320-1298-7	LOGOTYPE LIGHT
39948-E2803	AIRSPEED INDICATOR
42550-5	ROTATING BEACON LIGHT
430120-E2300	VERTICAL SPEED INDICATOR
45100-E2111	ALITUDE PRESLFECT
501-1197-09	EMERGENCY GYRO
501-1228-004	EMERGENCY POWER SUPPLY
5090-1-2	REMOTE ELECTRONIC UNIT
5091-14-1-1	AUDIO CONTROL PANEL
5095-1-1	AUDIO CENTER UNIT
51539-014A	GENERATOR CONTROL UNIT
51549-001A	GENERATOR CONTROL UNIT
519-28704-E2101	SERVO ALTIMETER
522541	AMMETER
522542	CABIN TEMP SENSOR
522543	EGT INDICATOR
522544	RPM INDICATOR
522545	TEMP MONITOR BATTERY
522840	HYDRAULIC FLUID INDICATOR
540-45100-XXXX	ALT ALERTER
55-0521-4-(6)	RIGHT FLOODLIGHT INVERTER
55-0531-6-(6)	LEFT FLOODLIGHT INVERTER
570-23932-981	ENCODING ALTIMETER
570-248929-XXX	ALTIMETER
60-2799-1	POWER SUPPLY



EMB-120 | Overhaul/Repair Capability

Part Number	Description
622-2506-006	RMI INDICATOR
622-2855-001	TRANSCEIVER
622-2937-004	INDICATOR
622-4022-001	TRANSCEIVER
622-5734-002	SERVO
622-6092-012	RADAR CONTROL PANEL
622-6137-001	RECEIVER
622-6152-001	TRANSCEIVER
622-6263-001	TRANSCEIVER
622-6520-001	CONTROL PANEL
622-6521-009	PANEL CONTROL
622-6522-001	CONTROL BOX
720-15900-XXX	TRIPLE INDICATOR
787-6173-013	ATTITUDE INDICATOR
9300-343	SHOCKMOUNT
93-A100-80	VOICE RECORDER
93-A100-83	VOICE RECORDER
93-A152-20	CONTROL PANEL
B-6245-305	CABIN LIGHT
C3J002	FAN
D366-04-001	EMERGENCY LIGHTING BATT. PACK
D-6490-12	TAXI LIGHT
D-6490-13	TAXI LIGHT
DGL-OVC119D	OAT INDICATOR
MS25277-1-7079	ROTATING BEACON LIGHT
PC251-1C	DC/AC INVERTER
SEDL-0C2LJX	TORQUE INDICATOR
SEDL-0C4BC	OILTEMP/PRESS IND
SEL-0C29DH	RPM INDICATOR
SEL-0C29J	RPM INDICATOR
SFL-0C10EG	ITT INDICATOR