



King Air

OVERHAUL/REPAIR CAPABILITY LIST



King Air | Overhaul/Repair Capability

Part Number	Description
060-0015-00	Directional Gyro
066-3062-0X	Encoding Altimeter
071-01519-0101	Radar R/T
100-0034-04	Prop Tach Indicator
100-389005-11	Starter Generator
100-389014-5	Starter Generator
101-364270-1	Generator Control Unit
101-364270-5	Generator Control Unit
101-384004-5	Blower Assembly
101-384004-9	Blower Assembly
101-384144-1	Distribution Valve
101-389007-1	Starter Generator
101-500047-17	Elevator Servo
101-500047-21	Elevator Servo
101-500047-33	Elevator Servo
103598-2	Outflow Valve
103648-13	Outflow Valve
103648-4	Outflow Valve
103648-5	Outflow Valve
103648-6	Outflow Valve
103648-7	Outflow Valve
130346-1	Pressurization Control
130398-2	Pressurization Control
1532-3B	Distribution Valve
1532-3C	Distribution Valve
1U149-001-6	Horizon Gyro
23048-016	Starter Generator
23048-018	Starter Generator
23069-015	Starter Generator
23069-016	Starter Generator
23079-000-1	Starter Generator
23080-011	Starter Generator
23085-001	Starter Generator
2587193-43	Directional Gyro
328A-3G	Slaving Amp
331A-3G	HSI
331A-6P	Course Indicator
332C-10	RMI
332D-11A	Vertical Gyro
332-D11T	Vertical Gyro



King Air | Overhaul/Repair Capability

Part Number	Description
332E-4	Directional Gyro
334C-11	Primary Servo
334C-9A	Primary Servo
334D-6	Trim Servo
334D-6A	Trim Servo
5035P-P46	Encoding Altimeter
509-0001-904	Turn & Bank Indicator
509-0001-910	Turn & Bank Indicator
51530-001A	Generator Control Unit
51530-007B	Generator Control Unit
51538-001A	Generator Control Unit
522-2638-006	HSI
522-2644-011	Slaving Amp
522-3241-000	Directional Gyro
562-805	Volt Load Meter
570-531	AC Volt/Freq. Meter
60-1750-3	Power Supply
622-0555-00X	RMI
622-0965-003	Elevator Servo
622-0965-00X	Trim Servo
622-1270-001	Transponder
622-2501-001	Radar Antenna
622-2504-001	Radar Antenna
622-2733-001	Elevator Servo
622-2733-002	Elevator Servo
622-2855-0X1	Radio Altimeter
622-3201-001	Radio Altimeter
622-3260-001	Trim Servo
622-4565-00X	Vertical Gyro
622-7337-001	Radar R/T
787-6385-003	Course Indicator
792-6694-001	Vertical Gyro
8DJ81AAP1	Prop Tach Indicator
8DJ81BLB4	Prop Tach Indicator
8DJ81WBA4	Turbine Tach Indicator
ALT-55B	Radio Altimeter
ANT-312	Radar Antenna
ANT-318	Radar Antenna
ART-2000	Radar R/T
C-14A	Directional Gyro



King Air | Overhaul/Repair Capability

Part Number	Description
EM609-3	Blower Assembly
EM609-4	Blower Assembly
EM8001	Tach Generator
KEA-346	Encoding Altimeter
KG-102A	Directional Gyro
LT-52A	Dimmer
SR-2AG	Torque Indicator
SR-2AM	Torque Indicator
SRL-C2C	Torque Indicator
SRL-C2F	Torque Indicator
SRL-C8C	Fuel Flow Indicator
TDR-90	Transponder
TDR-94D	Mode S Transponder
WXT-250B	Radar R/T