



CASA 212

OVERHAUL/REPAIR CAPABILITY LIST



CASA 212 | Overhaul/Repair Capability

| Part Number | Description |
|--------------------|--------------------------|
| 01-200-102 | ALTIMETER |
| 064-1023-02 | COMM TRANSCEIVER |
| 066-03062-X | ENCODING ALTIMETER |
| 066-03125-0600 | ELECTRONIC DISPLAY |
| 066-04021-1111 | SYMBOL GENERATOR |
| 066-1071-X | ATC TRANSPONDER |
| 066-1078-X | NAV RECEIVER |
| 066-1091-X | NAV INDICATOR |
| 066-3031-X | RADAR ALTIMETER |
| 066-3060-X | RADIO MAGNETIC INDICATOR |
| 071-00074-0200 | SWITCHING UNIT |
| 071-1210-X | ADF CONTROL |
| 071-1215-X | VHF COMM CONTROL |
| 071-1216-X | VHF NAV CONTROL |
| 071-1282-X | VHF COMM CONTROL |
| 10-0706-11 | EMERGENCY EXIT LIGHT |
| 10-378400-S | IGN EXCITER |
| 1231 | RELAY |
| 1234T100-7TZ | TURN AND SLIP INDICATOR |
| 124-560-1 | IND RPM |
| 126-177 | IND RPM |
| 126-178 | IND RPM |
| 1311-04 | ANUC PANEL |
| 154BS101-1 | MODULAR POWER SYSTEM |
| 156120-2-1 | OIL TO FUEL COOLER |
| 158410-3 | OIL COOLER |
| 162B243 | IND OIL TEMP |
| 162B48 | AIR TEMP IND. |
| 193D-03 | CONTROL UNIT |
| 21065 | OVERSPEED GENERATOR |
| 217-04111 | FUEL PRESS IND. |
| 217-05111 | DE-ICE PRESS IND. |
| 217-08151 | OIL PRESS IND. |
| 23079-005 | D.C. STARTER/GENERATOR |
| 2586261-1 | DIGITAL CONTROL |
| 2586333-3 | DIRECTIONAL GYRO |
| 2C27-2 | FUEL BOOST PUMP |
| 2CM9ABZ7 | TACH GENERATOR |
| 30-1033-19 | ANTI-COLLISION LIGHT |
| 30-231-3 | SMOKE DETECTOR |



CASA 212 | Overhaul/Repair Capability

| Part Number | Description |
|--------------------|-----------------------------|
| 319980-13-1 | VALVE |
| 363004-061 | IND FUEL |
| 3D2353 | DEICE VALVE |
| 3E1964-4 | DE-ICE TIMER |
| 4001018-6108 | ANT RADAR |
| 4001973-0104 | RECEIVER TRANSMITTER |
| 4001976-0701 | RADAR UNTERFACE UNIT |
| 400963-445 | RMI |
| 4020501-300 | HORIZON GYRO |
| 4026206-901 | HORIZON SITUATION INDICATOR |
| 418-00051 | OIL PRESS TRANS |
| 418-04014 | FUEL PRESS TRANS |
| 4426-419-3 | IND. FLAP |
| 4426-425-00-00 | IND |
| 501-1533-51 | ATTITUDE INDICATOR |
| 504-0017-914 | GYRO HORZ. |
| 510-8C | GYRO HORZ |
| 51509-002 | GCU |
| 523029 | EGT IND. |
| 5934PA1A86 | ALTIMETER |
| 5A16-12-27K00 | A/S IND |
| 60-1321-1 | POWER SUPPLY |
| 622-1032-001 | RMI DRIVER |
| 622-1270-001 | TRANSPONDER |
| 622-1334-001 | VHF COMM TRANSCEIVER |
| 622-1334-002 | VHF COMM TRANSCEIVER |
| 622-2362-001 | ADF RECEIVER |
| 622-2855-001 | RADIO ALTIMETER |
| 622-6137-201 | NAV RECEIVER |
| 622-6153-001 | VHF COMM TRANSCEIVER |
| 622-6523-204 | CONTROL |
| 622-6524-003 | IND DME |
| 622-6614-003 | HF CONTROL |
| 622-6667-001 | HF POWER AMPLIFIER |
| 622-7318-003 | DME INDICATOR |
| 622-8761-007 | RADIO SET CONTROL |
| 699Z-1 | RMI DRIVER |
| 7000622-901 | VERT GYRO |
| 7001174-952 | HSI |
| 7002260-922 | SERVO |



CASA 212 | Overhaul/Repair Capability

| Part Number | Description |
|--------------------|----------------------|
| 7002260-923 | SERVO |
| 7003032-913 | SERVO |
| 7003897-902 | CONTROL AUTO PILOT |
| 7040 | RATE OF CLIMB IND |
| 7236-2-300 | |
| 766-8772-005 | ICS |
| 8055613-0202 | RADAR INDICATOR |
| 822-1182-002 | RECEIVER TRANSMITTER |
| 865956-7 | BETA SWITCH |
| 868558-1 | SHUTOFF VALVE |
| 897205-3 | CONTROL |
| 897331-2 | TRANSDUCER |
| 897375-16 | FUEL CONTROL |
| 897476-4 | COMP. |
| 897476-8 | COMP RESISTOR |
| 898558-1 | VALVE |
| 8DJ81CER4 | TACH IND. |
| 949594-112 | TORQUE LIMITER |
| 95148 | VALVE |
| A-1258-3 | GRIMES LIGHT |
| A-501 | MONT. TEMP |
| A-503 | SENSOR TEMP |
| A703B | RELAY |
| A712W | RELAY |
| A719W | RELAY |
| A770R | RELAY |
| A882DL | RELAY |
| ADF-60A | ADF RECEIVER |
| AG34 | TACH GEN |
| ALT-55B | RADIO ALTIMETER |
| AR204A-61 | FUEL FLOW IND. |
| AV12555060030 | WINDSHIELD TEMP |
| AV16B21068 | VALVE SHUT OFF |
| B4515210-XXX | ALT. |
| BH18SR-134 | EGT IND. |
| BH18SR-2S6A | TEMP IND. |
| BXLB9304-11 | VALVE |
| C45501-10-002 | ENDODING ALT |
| CA19600-A-1C | VALVE 4 WAY |
| CA23800-B | VALVE |

Phone: (731) 645-9988

www.usaerospacecorp.com

FAX: (731) 645-9974

Effective: 5/1/2018

repairs@usaerospacecorp.com

Page 4 of 6



CASA 212 | Overhaul/Repair Capability

| Part Number | Description |
|---------------------|-----------------------------|
| CA242-3 | ACCUM |
| CA246-1E | VALVE |
| CA24800-31 | VALVE |
| CA24800-3B | ACT |
| CA250-3E | ACT |
| CA2660-1C | VALVE |
| CA29700-1 | VALVE |
| CA45000-0001 | VALVE |
| CA46000-0003A | VALVE |
| CA47200-1 | VALVE |
| CTL-230 | HF CONTROL |
| CTL-92 | CONTROL |
| DA1030/24-3-CSI | INVERTOR |
| DA1030-115/3-600SS | INVERTOR |
| DHC030-155/2G-1S0CS | INTERVER |
| G-2904-24 | POWER UNIT |
| G6314 | ICS PANEL |
| G-6325 | PANEL |
| G6345A | PANEL |
| GC66 | TRANSFORMER |
| GH-14 | HORIZON GYRO |
| HT4600 | TRANS PRESS |
| HTE8819 | VALVE |
| IA-102B | ICS |
| IE 4626 | IND HYD PRESS |
| IND-42A | IND DME |
| IND-42C | DME INDICATOR |
| KA8 | FUEL AMP |
| LT-52A | LIGHT DIMMER POWER SUPPLY |
| MML-OCIAAV | EGT IND |
| PC-250-1C | STATIC INVERTER |
| PC350-1A | INVERTER |
| PC-400 | CONTROL AUTO PILOT |
| PC610-0172 | CONVERTER |
| PWR-230 | HF POWER AMPLIFIER |
| RD-600 | HORIZON SITUATION INDICATOR |
| RR52000E | BOOST PUMP |
| S216-1-117 | IND OIL |
| S458-2-285 | VOLTMETER |
| S458-2-286-1 | VOLTMETER |



CASA 212 | Overhaul/Repair Capability

| Part Number | Description |
|--------------------|----------------------|
| S458-2-287 | AMP MOTER |
| SM-300 | SERVO |
| SM-300 | SERVO |
| SV30A2N06T43 | SOLENOID VALVE |
| TDR-90 | TRANSPONDER |
| TM400 | SERVO |
| V5000-121 | SHUTOFF VALVE |
| VG-14A | VERT GYRO |
| VHF-20B | VHF COMM TRANSCEIVER |
| VHF-20B | VHF COMM TRANSCEIVER |
| VHF-22B | VHF COMM TRANSCEIVER |
| VIR-32 | NAV RECEIVER |
| XW20173M1 | WIPER MOTOR |
| Z11C243-12 | SWITCH PRESS |