



Metro

OVERHAUL/REPAIR CAPABILITY LIST



Metro | Overhaul/Repair Capability

| Part Number | Description |
|--------------------|----------------------------|
| 01200102 | ALTIMETER ENCODING |
| 066-1063-00 | GLIDESLOPE RECEIVER |
| 066-3012-01 | MARKER LIGHT ASSY |
| 066-3034-12 | INDICATOR |
| 066-3042-00 | RMI |
| 066-3051-00 | ALTITUDE DIGITIZER |
| 066-3062-02 | ALTIMERER |
| 066-3083-00 | RADAR INDICATOR |
| 066-3104-006 | ADF INDICATOR |
| 066-3114-XX | RADAR INDICATOR |
| 066-4009-00 | VOR/LOC CONVERTER |
| 071-1066-03 | ADF CONTROL |
| 071-1174-00 | ANTENNA, ADF |
| 071-1192-22 | TRANSPONDER CONTROL |
| 071-1210-17 | ADF CONTROL |
| 071-1215-31 | COM CONTROL |
| 071-1216-26 | NAV CONTROL |
| 071-1276-22 | TRANSPONDER CONTROL |
| 071-1282-31 | COM CONTROL |
| 071-1283-26 | NAV CONTROL |
| 071-1284-00 | ADF CONTROL |
| 071-1314-02 | RADAR R/T |
| 071-1378-00 | RADAR R/T |
| 071-4037-01 | COOLING BLOWER |
| 10028-101 | TORQUE TRANSDUCER |
| 10028-102 | TORQUE TRANSMITTER |
| 10028-103 | TORQUE TRANSMITTER |
| 10028-104 | TORQUE TRANSMITTER |
| 10028-105 | TORQUE TRANSMITTER |
| 101735-11807 | ALTIMETER |
| 102076611 | CONTROLLER, PRESSURIZATION |
| 102340-10 | CABIN PRESS CONTROLLER |
| 1034623 | VALVE, DUMP |
| 1034647 | VALVE, OUTFLOW |
| 10731241 | VALVE, PNEUMATIC |
| 1245112 | TORQUE IND |
| 1250185 | MOTOR |
| 1250270-1 | BLOWER |
| 12S1103 | AMMETER |
| 14-01321-00 | MOTOR, WIPER |



Metro | Overhaul/Repair Capability

| Part Number | Description |
|--------------------|------------------------|
| 14-90004-01 | MOTOR, WIPER |
| 14-91326-03 | MOTOR, WIPER |
| 14-91355-02 | CONVERTER, WIPER |
| 17101 | ALTITUDE WARNING |
| 172070 | VALVE, PRESSURE |
| 17217001 | REGULATOR, OXY PRESS. |
| 18602 | INDICATOR |
| 191003 | VALVE, FLAP LOCK OUT |
| 197001 | VALVE |
| 1C495 | PUMP, BOOST |
| 1D29 | PUMP, FUEL BOOST |
| 200DC | GYRO |
| 20AA1 | STALL WARNING UNIT |
| 2-1203-3 | BRAKE ASSY |
| 213100 | SYNCH ACTUATOR |
| 213765 | SYNCHROPHASER, PROP |
| 2268A-1 | CAPSTAN |
| 22702-031 | ENCODING ALTIMETER |
| 22722-004 | ALTITUDE ALERTER |
| 22722-034 | ALTITUDE ALERTER |
| 23079-000-1 | STARTER GENERATOR |
| 244-528 | BRAKE, DISC |
| 2594484 | FLUX VALVE |
| 26-66306-001 | RPM IND / % TACH IND |
| 26-66309-001 | OAT IND |
| 267899 | AMP METER |
| 26-83001-001 | IND, OXY CYLINDER |
| 26-86010-001 | CLOCK |
| 26-86019-001 | IND, SUCTION |
| 26-86021-001 | STANDARD ALTIMETER |
| 26-86022-003 | V.S.I. |
| 26-86024-001 | TURN AND BANK |
| 26-86026-003 | INDICATOR, FLAP |
| 26-86026-005 | GEAR FLAP INDICATOR |
| 26-87007-003 | INDICATOR, DEICE PRESS |
| 270-2436-040 | CONTROL |
| 27-149193-027 | AIRSPEED IND |
| 27-19024-001 | VOLTMETER DC |
| 27-19025-007 | AMMETER |
| 27-19025-013 | AMMETER |



Metro | Overhaul/Repair Capability

| Part Number | Description |
|--------------------|---------------------------|
| 27-19037-003 | INDICATOR, PITCH TRIM |
| 27-19037-007 | INDICATOR, AWI |
| 27-19076-001 | INDICATOR, FLAP POSTION |
| 27-19093-003 | VALVE, ASSY |
| 27-19116-003 | AMMETER |
| 27-19116-005 | AMMETER |
| 27-19117-001 | VOLMETER |
| 27-19118-009 | TRIMETER |
| 27-19118-011 | TRIMETER |
| 27-19119-001 | INDICATOR, FLAP POSITION |
| 27-19119-003 | INDICATOR, FLAP POSITION |
| 27-19121-3 | HYDRAULIC PRESS IND |
| 27-19122-001 | INDICATOR, SUCTION |
| 27-19123-005 | INDICATOR, OXY PRESS |
| 27-19124-3 | PRESSURE IND |
| 27-19126-1 | INDICATOR |
| 27-19132-001 | INDICATOR, DIFF PRESS |
| 27-19133-005 | INDICATOR, PITCH TRIM |
| 27-19134-001 | TURN AND BANK |
| 27-19135-001 | CLOCK |
| 27-19136-001 | VSI/RATE OF CLIMB |
| 27-19137-023 | AIRSPEED INDICATOR |
| 27-19137-031 | AIRSPEED INDCATOR |
| 27-19138-001 | STANDARD ALTIMETER |
| 27-19139-001 | VSI/RATE OF CLIMB |
| 27-19144-005 | INDICATOR, AWI |
| 27-19144-007 | INDICATOR, AWI |
| 27-19144-009 | AWI QTY GAUGE |
| 27-19145-003 | INDICATOR, CABIN AIR TEMP |
| 27-19145-005 | INDICATOR, CABIN AIR TEMP |
| 27-19145-7 | CABIN TEMP INDICATOR |
| 27-19149-003 | EGT IND |
| 27-19155-001 | TRANSDUCER OXY PRESS |
| 27-19155-003 | TRANSDUCER OXY PRESS |
| 27-19156-001 | TRANSDUCER, DEICE |
| 27-19156-003 | TRANSDUCER, DEICE |
| 27-19157-003 | %RPM INDICATOR |
| 27-19158-007 | %TORQUE INDICATOR |
| 27-19160-001 | OIL TEMP PRESS IND |
| 27-19160-5 | OIL TEMP PRESS IND |



Metro | Overhaul/Repair Capability

| Part Number | Description |
|--------------------|----------------------------|
| 27-19161-1 | FUEL PRESS IND |
| 27-19167-001 | TURN AND SLIP |
| 27-19171-1 | SAS INDICATOR |
| 27-19193-001 | AIRSPEED INDICATOR |
| 27-19193-009 | AIRSPEED INDICATOR |
| 27-19193-027 | AIRSPEED INDICATOR |
| 27-19193-23 | AIRSPEED INIDCATOR |
| 27-19216-005 | TACH GENERATOR |
| 27-19313-001 | EGT INDICATOR |
| 27-36053-001 | ACTUATOR, FLAP |
| 27-44049-027 | SAS SERVO |
| 27-53043-003 | AMP, NOSE GEAR STEERING |
| 27-53043-037 | AMP, NWS |
| 27-53043-049 | AMP, NWS |
| 27-53043-071 | AMP, NWS |
| 27-53043-075 | AMP,NWS |
| 27-66004-003 | INDICATOR, ITT |
| 27-66004-019 | INDICATOR, TEMP |
| 27-66008-005 | OIL TEMP INDICATOR |
| 27-66009-001 | OIL TEMP INDICATOR |
| 27-66010-009 | TORQUE IND |
| 27-81007-003 | INDICATOR, HYDRAULIC PRESS |
| 27-81007-005 | INDICATOR, HYDRAULIC PRESS |
| 27-82135-003 | INDICATOR , CABIN AIR TEMP |
| 27-82168-005 | CONTROL BOX PITCH |
| 27-82168-007 | CONTROL BOX PITCH |
| 27-82174-073 | ANNUNCIATOR PANEL |
| 27-82174-085 | ANNUNCIATOR PANEL |
| 27-82174-109 | ANNUNCIATOR PANEL |
| 27-82174-111 | ANNUNCIATOR PANEL |
| 27-82174-121 | ANNUNCIATOR PANEL |
| 27-82174-151 | ANNUNCIATOR PANEL |
| 27-82174-173 | ANNUNCIATOR PANEL |
| 27-82176-041 | CONTROL BOX, AWI |
| 27-82176-053 | CONTROL BOX, AWI |
| 27-82176-071 | CONTROL BOX, AWI |
| 27-82181-019 | CONTROL BOX, SAS |
| 27-82181-023 | CONTROL BOX, SAS |
| 27-82185-047 | INTERFACE ASSY, SRL |
| 27-82185-059 | INTERFACE ASSY, SRL |



Metro | Overhaul/Repair Capability

| Part Number | Description |
|--------------------|----------------------------|
| 27-82185-063 | INTERFACE ASSY, SRL |
| 27-82186-017 | GEAR POSITION INDICATOR |
| 27-82186-033 | INDICATOR, GEAR POSITION |
| 27-82186-057 | GEAR POSITION INDICATOR |
| 27-82300-097 | LIGHT, INDICATOR |
| 27-82312-029 | START CTL RELAY |
| 27-82341-001 | TRIMETER |
| 27-82341-017 | TRIMETER |
| 27-82424-023 | CONTROL BOX, FLAP |
| 27-82425-029 | CONTROL BOX, FLAP |
| 27-82425-031 | CONTROL BOX, FLAP |
| 27-82426-017 | GEAR POSITION IND |
| 27-82426-043 | GEAR POSITION IND |
| 27-82426-047 | GEAR POSITION IND |
| 27-82461-001 | POWER SUPPLY |
| 27-82483-001 | TRANSMITTER, FLAP POSITION |
| 27-82486-007 | P.C. BOARD |
| 27-82486-009 | P.C. BOARD |
| 27-82487-005 | P.C. BOARD |
| 27-82487-007 | P.C. BOARD |
| 27-82488-011 | P.C. BOARD |
| 27-82489-011 | P.C. BOARD |
| 27-82531-001 | CONTROL SAS |
| 27-82531-029 | CONTROL SAS |
| 27-82551-001 | HYD CROSS FLOW |
| 27-82582-007 | WIPER CONTROL |
| 27-82719-007 | ROTATING BEACON |
| 27-83002-001 | INDICATOR, OXY PRESS |
| 27-84253-001 | DIFF PRESS GAUGE |
| 27-86022-001 | SPEED IND |
| 27-86022-015 | SPEED IND |
| 27-86022-017 | SPEED IND |
| 27-89000-163 | SWITCH ASSY |
| 27-90002-093 | LAMP ASSY |
| 28702-502 | ENCODING ALT |
| 28702-552 | ENCODING ALT |
| 300-14L | GYRO DIRECTIONAL |
| 30-0467-5 | STROBE LIGHT |
| 300SG119Q | STARTER GENERATOR |
| 3013H | SERVO |



Metro | Overhaul/Repair Capability

| Part Number | Description |
|--------------------|----------------------------|
| 3055383 | SWITCH, SPEED |
| 30D40 | FAN, FRESH AIR |
| 3103235-11 | FUEL NOZZLE |
| 3103235-8 | FUEL NOZZLE |
| 3103235-9 | FUEL NOZZLE |
| 3137L-2-3C | RMI IND |
| 3137L-B-61C | RMI IND |
| 3137L-B-63C | RMI IND |
| 32025041 | VALVE, BLEED AIR |
| 3202507 | VALVE, BLEED AIR |
| 32-19023-001 | SAS SERVO |
| 32-19025-001 | POWER SUPPLY |
| 32-19027-001 | MODULE, FIRE LOGIC |
| 323A-2G | FLUX DETECTOR |
| 3252013-1101 | ALTIMETER, ENCODING |
| 3252028-0101 | ALTIMETER, ENCODING |
| 328A-3G | SLAVING ACCESSORY |
| 331A-3G | COURSE IND |
| 332C-10 | RMI IND |
| 332D-11 | GYRO, VERTICAL |
| 332D-11T | GYRO, VERTICAL |
| 332D-11V | GYRO, VERTICAL |
| 332E-4 | GYRO, VERTICAL |
| 33300548 | IND, FIRE PLUG EXIT |
| 33370945 | MODULE, FIRE IND |
| 339F-12 | DME INDICATOR |
| 339F-12A | DME INDICATOR |
| 339H-4 | INDICATOR, RADIO ALTIMETER |
| 36104-1L11A1 | R.M.I. INDICATOR |
| 38E0111A | SAFETY VALVE SUCTION |
| 39290811 | VALVE, REGULATING |
| 3D1472 | TIMER, WING DEICE |
| 3E115010 | TIMER PROP DEICE |
| 3E11503 | TIMER PROP DEICE |
| 3E19641 | TIMER PROP DEICE |
| 3E19644 | TIMER PROP DEICE |
| 4000338-8503 | AMPLIFIER, YAW DAMP |
| 4000403-4301 | POWER SUPPLY |
| 4000523-8301 | SERVO, YAW DAMP |
| 4000780-8501 | SENSOR, SLIP SKIP |



Metro | Overhaul/Repair Capability

| Part Number | Description |
|--------------------|----------------------------|
| 4000784-8502 | TURN AND BANK |
| 4000790-4406 | DRIVE UNIT, RADAR |
| 4000874-8201 | GYRO DIRECTIONAL |
| 4000894-3004 | RADIO, COM/NAV |
| 4000946-5201 | RADAR INDICATOR |
| 4000946-5202 | RADAR INDICATOR |
| 40-0100-1 | ROTATING BEACON |
| 4001018-5108 | RADAR R/T |
| 4001018-6102 | RADAR R/T |
| 4001018-6104 | RADAR R/T |
| 4001018-6106 | RADAR R/T |
| 4001018-6108 | RADAR R/T |
| 4002963-901 | RMI INDICATOR |
| 4006451-0501 | CAPSTAN |
| 4099B | TURN AND BANK |
| 4100A | SENSOR, SLIP SKID |
| 41800054 | TRANSMITTER, OIL PRESSURE |
| 41802024 | TRANSMITTER, ENGINE TORQUE |
| 41802064 | TRANS MITTER |
| 41812044 | TRANSMITTER, FUEL PRESSURE |
| 488T | MICROPHONE |
| 500DCF28 | GYRO HORIZON |
| 500ECF | GYRO HORIZON |
| 500ECFL-2A | GYRO HORIZON |
| 501-0021-908 | HSI/ ATTITUDE INDICATOR |
| 501-1170-05 | GYRO HORIZON |
| 50284001 | DETECTOR, FAULT |
| 504-0002-913 | GYRO HORIZON |
| 504-0002-918 | GYRO HORIZON |
| 504-0006-913 | GYRO DIRECTIONAL |
| 504-0006-914 | GYRO DIRECTIONAL |
| 504-0010-909 | ARTIFICIAL HORIZON |
| 504-0017-901 | ARTIFICIAL HORIZON |
| 504-0017-904 | GYRO HORIZON |
| 504-0017-908 | ARTIFICIAL HORIZON |
| 504-0017-909 | GYRO HORIZON |
| 504-0017-916 | ARTIFICIAL HORIZON |
| 504-0017-921 | ARTIFICIAL HORIZON |
| 504-0021-901 | HRI/ATTITUDE INDICATOR |
| 504-0021-903 | HRI/ATTITUDE INDICATOR |



Metro | Overhaul/Repair Capability

| Part Number | Description |
|--------------------|-------------------------|
| 504-0021-908 | GYRO HORIZON |
| 504-0021-910 | HRI/ATTITUDE INDICATOR |
| 504-0030-911 | GYRO HORIZON |
| 505-0010-902 | AIM DIRECTIONAL GYRO |
| 507-0020-909 | TURN AND BANK INDICATOR |
| 509-0001-904 | TURN AND BANK INDICATOR |
| 509-0004-901 | TURN AND BANK INDICATOR |
| 510-24L | GYRO HORIZON |
| 510-37A | GYRO HORIZON |
| 510-8A | GYRO HORIZON |
| 510-8B | GYRO HORIZON |
| 510-8C | GYRO HORIZON |
| 510-8D | GYRO HORIZON |
| 51509-002 | GENERATOR CONTROL UNIT |
| 51509-002B | GENERATOR CONTROL UNIT |
| 51509-002R | GENERATOR CONTROL UNIT |
| 51539-005B | GENERATOR CONTROL UNIT |
| 519-28702-502 | ENCODING ALTIMETER |
| 520-3137-303 | RMI INDICATOR |
| 522-2638-001 | HSI/COURSE INDICATOR |
| 522-2638-006 | HSI/COURSE INDICATOR |
| 522-2638-007 | HSI/COURSE INDICATOR |
| 522-2638-009 | COURSE INDICATOR |
| 522-2644-001 | SLAVING ACCESSORY |
| 522-2644-011 | SLAVING ACCESSORY |
| 522-3241-000 | GYRO, DIRECTIONAL |
| 522-4945-001 | FLUX DETECTOR, COMPASS |
| 540-22722-034 | ALTITUDE ALERTER |
| 5537A | SERVO, TRIM |
| 56457-03 | HOUR METER |
| 601009980 | TURN AND BANK INDICATOR |
| 6110002 | EGT INDICATOR |
| 61100-02-334 | EGT INDICATOR |
| 6110003 | EGT INDICATOR |
| 6112106 | TORQUE INDICATOR |
| 622-0555-003 | RMI |
| 622-0555-005 | RMI |
| 622-0876-001 | NAV RECEIVER |
| 622-0877-001 | NAV RECEIVER |
| 622-1204-004 | RADIO ALTIMETER |



Metro | Overhaul/Repair Capability

| Part Number | Description |
|--------------------|-------------------------|
| 622-1233-001 | DME |
| 622-1233-012 | DME INDICATOR |
| 622-1234-013 | DME INDICATOR |
| 622-1234-016 | DME INDICATOR |
| 622-1270-001 | TRANSPONDER |
| 622-1352-002 | FLIGHT DIRECTOR |
| 622-1879-001 | COM |
| 622-1879-002 | COM |
| 622-2012-002 | DME IND |
| 622-2362-001 | ADF RECEIVER |
| 622-2363-001 | ADF ANTENNA |
| 622-3102-001 | LIGHT, MARKER |
| 622-3102-017 | REMOTE MARKER LIGHTS |
| 622-3594-005 | FLIGHT DIRECTOR |
| 622-4023-001 | INDICATOR, RADAR |
| 622-4483-001 | HSI/COURSE IND |
| 622-4483-002 | HSI/COURSE IND |
| 622-4565-001 | VERTICAL GYRO |
| 622-4938-001 | RMI INDICATOR |
| 622-6137-001 | NAV RECEIVER |
| 622-6263-001 | DME MEASURING EQUIPMENT |
| 622-6389-001 | COM |
| 622-6389-002 | COM |
| 622-6520-008 | CONTROL |
| 622-6521-016 | CONTROL |
| 622-6522-008 | CONTROL |
| 622-6523-008 | CONTROL |
| 622-6524-003 | DME IND |
| 66D44 | REGULATOR |
| 69254510 | VALVE, PRIMARY |
| 69254512 | VALVE, PRIMARY |
| 69254513 | VALVE, PRIMARY |
| 70-105-01 | ALTITUDE ALERTER |
| 709201-1 | SWITCH ASSY |
| 70F | TRANSMITTER, FLAP SAS |
| 7112615 | PUMP, AWI |
| 711269 | PUMP, AWI |
| 77-1493-006 | ADF CONTROL HEAD |
| 792-6295-003 | ADF CONTROL HEADT |
| 8095536-8101 | RADAR RT |



Metro | Overhaul/Repair Capability

| Part Number | Description |
|--------------------|-----------------------|
| 8095537-8101 | RADAR IND |
| 8240011 | IND, SAS |
| 8496 | AMP, FLAP CONTROL |
| 86000-1161 | CLOCK |
| 8905537-810X | RADAR, INDICATOR |
| 895380-() | VALVE, FUEL BYPASS |
| 8973313 | TRANSDUCER, TORQUE |
| 90033-33 | FLASHING LIGHT |
| 93A100-80 | CVR |
| 949596-() | LIMITER ASSY |
| 9551A | TURN AND BANK |
| 965-0476-088 | GROUND PROX |
| 965-0476-092 | GROUND PROX |
| 965-0476-093 | GROUND PROX |
| 9792667 | VALVE, HOT AIR MIXING |
| 980-6019-001 | CVR |
| 981005101 | MASTER CYLINDER |
| 981005201 | MASTER CYLINDER |
| A100A | CVR |
| A280 | AMP, PA |
| A28D | AMP |
| A490-T-DF-28 | PWR SUPPLY |
| A703 | RELAY, BATTERY |
| A703DB | RELAY, BATTERY |
| A703E | RELAY, BATTERY |
| AAC-334 | TORQUE GAUGE |
| ADF-60A | ADF RX |
| ADI-84A | ADI |
| AG34 | TACH GENERATOR |
| AG44 | TACH GENERATOR |
| AIM300-14L | GYRO HORIZON |
| AM5819T5 | TURN AND BANK |
| ANS70SL | TURN AND BANK |
| ANT-60A | ANT |
| ART-161A | RADAR ANT |
| AV-557D | CVR |
| C213796 | CONTROL BOX PROP SYNC |
| CAD-62 | CTL ADAPTER |
| CN-2012A | RADIO, COM/NAV |
| CTL-22 | COM CTL |



Metro | Overhaul/Repair Capability

| Part Number | Description |
|--------------------|------------------------|
| CTL-32 | NAV CTL |
| CTL-62 | ADF CTL |
| CTL-92 | TRANSPONDER CTL |
| DA-144A | DRIVE UNIT, RADAR |
| DG-882A | GYRO, DIRECTIONAL |
| DME-40 | DME RT |
| DME-42 | DME RT |
| DMN-25-2 | G/S ANT |
| DSF15461 | FUEL TOTALIZER |
| DSF15492 | FUEL FLOW IND |
| DSF15493 | FUEL FLOW IND |
| DSF6841 | FUEL QTY IND |
| F1080-1000 | MAP HOLDER |
| FD-112V | FLIGHT DIRECTOR |
| G3600A5 | LANDING LIGHT ASSY |
| GA100A | CVR |
| H10-30 | PILOT BOOM MIC/HEADSET |
| HYLZ50434 | TEMP CONTROL |
| HYLZ504341 | TEMP CONTROL |
| HYLZ8882-1 | TEMP CONTROL |
| IN-152A | RADAR IND |
| IN-182A | RADAR IND |
| IN-812A | RADAR IND |
| IND-200A | RADAR IND |
| IND-31 | IND |
| IND-40 | DME IND |
| IND-42 | DME IND |
| KA-35 | MARKER LIGHT |
| KEA-346 | ALTIMETER |
| KFS-576 | CTL TRANSPONDER |
| KFS-576A | CTL TRANSPONDER |
| KFS-580B | CTL ADF |
| KFS-586 | CTL ADF |
| KFS-586A | CTL ADF |
| KFS-598 | CTL COM |
| KFS-598A | CTL COM |
| KI-206 | NAV IND |
| KN-72 | NAV/LOC CONVERTER |
| KN-75 | G/S RX |
| KNI-581 | RMI |



Metro | Overhaul/Repair Capability

| Part Number | Description |
|--------------------|------------------------|
| L10-16 | DME ANT |
| LT103 | DIMMER PWR SUP |
| LT3100-1 | DIMMER PWR SUP |
| LT52 | DIMMER PWR SUP |
| M1035-0111-02 | AUDIO CTL |
| M1035-0130-02 | AUDIO CTL |
| M1035-AAAA-BQD2 | AUDIO CTL |
| M1035-AAAB-JLB2 | AUDIO CTL |
| M1035-AAAB-JLM2 | AUDIO CTL |
| M1035-CAAB-JLB2 | AUDIO CTL |
| M1035-DJ2AB | AUDIO CTL |
| M1035J-2 A/B | AUDIO CTL |
| M1035-JECF-ENY2 | AUDIO CTL |
| M1035-W2 | AUDIO CTL |
| M1585 | RMI |
| M811B | CLOCK |
| M877 | CLOCK |
| MKL-351 | MKR LIGHT |
| MKR101PL | MKR RX |
| MS1179831 | COMPASS |
| MS179383-1 | COMPASS |
| N417-2 | NAV ANT SPLITTER |
| PC15BC | STATIC INVERTER |
| PC15HCF | STATIC INVERTER |
| PC15HF | STATIC INVERTER |
| PC250 | STATIC INVERTER |
| PC350 | STATIC INVERTER |
| PS-243A | PWR CONVERTER |
| PS-401 | DIMMER PWR SUP |
| RCA28 | TURN AND BANK |
| RH-404 | RMI |
| RMT-30 | RMI |
| RS-811A | RADAR RT |
| RTI-600-2A | BATT/TEMP IND |
| SCF15482 | CONDITIONER, FUEL FLOW |
| SLZ8826 | VSI |
| TDR-90 | TRANSPONDER |
| V1000 | MASTER CYLINDER |
| V1151000 | MASTER CYLINDER |
| V1151125 | MASTER CYLINDER |



Metro | Overhaul/Repair Capability

| Part Number | Description |
|--------------------|--------------------|
| VC10-126 | CTL |
| VC-169 | NAV CTL |
| VC-207 | COM CTL |
| VC-297 | COM CTL |
| VHF-20A | COM RT |
| VHF-21A | COM RT |
| VHF-22A | COM RT |
| VIR-30A | NAV RX |
| VIR-30M | NAV RX |
| VIR-31A | NAV RX |
| VIR-32A | NAV RX |
| WL/1403AM/M8/3 | ENCODING ALTIMETER |
| WXT-200A | RADAR RT |