



EMB-120

OVERHAUL/REPAIR CAPABILITY LIST



EMB-120 | Overhaul/Repair Capability

Part Number	Description
02R3045669	A02 Fuel Nozzle
123-02328-401	STEERING HANDWHEEL
123-02328-403	STEERING HANDWHEEL
30081-001	DC GENERATOR
3034205	C01 Fuel Nozzle
3034208	B01 Fuel Nozzle
3034215	A01 Fuel Nozzle
3034219	C02 Fuel Nozzle
3034222	B02 Fuel Nozzle
3034225	A02 Fuel Nozzle
3034729	A01 Fuel Nozzle
3034731	C01 Fuel Nozzle
3034733	B01 Fuel Nozzle
3035048	C01 Fuel Nozzle
3035049	B01 Fuel Nozzle
3035056	C02 Fuel Nozzle
3035057	B02 Fuel Nozzle
3037380(A)	A02 Fuel Nozzle
3037382(A)	C01 Fuel Nozzle
3037383(A)	B01 Fuel Nozzle
3037384(A)	C02 Fuel Nozzle
3037385(A)	B02 Fuel Nozzle
3037422	B02 Fuel Nozzle
3037423	B01 Fuel Nozzle
3037425	C02 Fuel Nozzle
3037426	C01 Fuel Nozzle
3038098	C01 Fuel Nozzle
3038099	C02 Fuel Nozzle
3038103	B01 Fuel Nozzle
3038104	B02 Fuel Nozzle
3038105	B02 Fuel Nozzle
3038106	B01 Fuel Nozzle
3038108	C02 Fuel Nozzle
3038109	C01 Fuel Nozzle
3038117	A01 Fuel Nozzle
3038118	A02 Fuel Nozzle
3038699	B02 Fuel Nozzle
3038703	B01 Fuel Nozzle
3038704	C02 Fuel Nozzle
3038705	C01 Fuel Nozzle



EMB-120 | Overhaul/Repair Capability

Part Number	Description
3038706	A01 Fuel Nozzle
3038707	A02 Fuel Nozzle
3038825	A01 Fuel Nozzle
3038826	C01 Fuel Nozzle
3038827	B01 Fuel Nozzle
3039719	A01 Fuel Nozzle
3039720	C01 Fuel Nozzle
3039741	B01 Fuel Nozzle
3039742	A01 Fuel Nozzle
3039743	C01 Fuel Nozzle
3039744	B01 Fuel Nozzle
3039745	C01 Fuel Nozzle
3039746	B01 Fuel Nozzle
3039971	A02 Fuel Nozzle
3039975	A01 Fuel Nozzle
3040142	A01 Fuel Nozzle
3040143	A01 Fuel Nozzle
3040144	A01 Fuel Nozzle
3040145	A01 Fuel Nozzle
3040146	A02 Fuel Nozzle
3045307	A02 Fuel Nozzle
3045667	C02 Fuel Nozzle
3045668	B02 Fuel Nozzle
3045669	A02 Fuel Nozzle
3045670	C01 Fuel Nozzle
3045672	B01 Fuel Nozzle
3045673	A01 Fuel Nozzle
3045692	A01 Fuel Nozzle
3045776-01	B01 Fuel Nozzle
3045778-01	B02 Fuel Nozzle
3045781-01	C01 Fuel Nozzle
3045783-01	C02 Fuel Nozzle
3045786-01	A02 Fuel Nozzle
3045788-01	A01 Fuel Nozzle
39948-E2803	AIRSPED INDICATOR
45100-E2111	ALITUDE PRESLECT
501-1197-09	EMERGENCY GYRO
501-1228-004	EMERGENCY POWER SUPPLY
51539-014A	GENERATOR CONTROL UNIT
51549-001A	GENERATOR CONTROL UNIT



EMB-120 | Overhaul/Repair Capability

Part Number	Description
519-28704-E2101	SERVO ALTIMETER
522541	AMMETER
522542	CABIN TEMP SENSOR
522543	EGT INDICATOR
522544	RPM INDICATOR
522545	TEMP MONITOR BATTERY
522840	HYDRAULIC FLUID INDICATOR
622-2506-006	RMI INDICATOR
622-2855-001	TRANSCEIVER
622-2937-004	INDICATOR
622-4022-001	TRANSCEIVER
622-5734-002	SERVO
622-6137-001	RECEIVER
622-6152-001	TRANSCEIVER
622-6263-001	TRANSCEIVER
622-6520-001	CONTROL PANEL
622-6521-009	PANEL CONTROL
622-6522-001	CONTROL BOX
787-6173-013	ATTITUDE INDICATOR