



# Beech 1900

## OVERHAUL/REPAIR CAPABILITY LIST



Beech 1900 | Overhaul/Repair Capability

<b>Part Number</b>	<b>Description</b>
064-1019-XX	VHF COM
065-0053-XX	ATTITUDE SELECTOR
066-1062-XX	TRANSPONDER
066-1067-XX	NAV REC
066-1069-XX	DME IND
066-1072-XX	ADF REC
066-3034-XX	NAV IND
066-3062-XX	ENC ALT
066-4009-XX	NAV CONVERTER
066-4010-XX	NAV COMP
071-1234-XX	ADF ANT
10010-0000-02	FUEL QYT IND
10227N01T00	ITT IND
103646-1	Outflow/Safety Valve
107312-10	Pneumatic Relay Assembly
114-380004-X	ITT IND
114-380007-5	TURBINE TACH IND
114-380008-1	FUEL FLOW IND
114-380009-X	OIL TEMP IND
114-380010-1	TURN & BANK IND
114-380012-3	AIRSPEED IND
114-380027-3	PNEU IND
114-380034-9	FUEL QTY IND
114-380035-X	INST VERT IND
114-380039-1	EJECTOR BYPASS VALVE
114-380049-X	PROP DEICE IND
118-380000-1	FUEL QTY UC TY
130374-22	Cabin Pressure Controller
130538-1	CABIN PRESS CTRL
131358-7	Auxiliary Volume Tank
140538	Cabin Pressure Control System
207	PA AMP
23080-XXX	STARTER GENERATOR
25000-00311	CVR CTL
25005-0031	CVR MIC
2587193-43	GYRO, COMPASS(DIR)
2587193-XX	DIRECTIONAL GYRO
30012-0000-X	SIGNAL CONDITIONER
31342-XXX	AC PWR GENERATOR
501-1228-XX	POWER SUPPLY



Beech 1900 | Overhaul/Repair Capability

<b>Part Number</b>	<b>Description</b>
501-1478-XX	CAPSTAN
502-0011-XXX	AUDIO CONTROL PANEL
504-0017-917	ADI
504-0038-X	IND PILOT GYRO
51539-XXX	GEN CTL PNL
51634-XXX	GEN CTL PNL
520-7100-001	RMI CONVERTER
520-7137-014	IND RADIO MAG
522-1936-047	SLAVE IND
522-2638-XXX	HOR. SIT. IND.
522-3241-000	GYROSCOPE DIR
522396	HYDRAULIC OIL QTY IND
522406	DC AMP/VOLT METER
522781	FUEL TOTAL IND
522783	CABIN PRESS IND
522792	PROPELLER IND
522794	IND ENG OIL PRESS
522795	IND PROP OIL PRESS TEMP
522797	IND HYD BRAKE
522809	IND BATT FUEL
522834	TRIM POS IND
522858	IND FLAP POS
522861	IND ITT A MODEL
522948	IND ENG TOR
523250	HYD PRESS IND MOD SF
523267	IND CABIN TEMP
523347	IND ITT A MODEL
540-22722-034	IND ALTITUDE ALER
55-0521-4-X	INVERTER
55-0531-6-X	INVERTER
571-29020-412	ALTIMETER COPILOT/PH
602T	HAND MIC
622-1270-XXX	ATC TRANSPONDER
622-2362-XXX	ADF
622-2501-XXX	RADAR ANT
622-2504-XXX	WEATHER RADAR
622-2855-XXX	RADIO ALTIMETER
622-3710-XXX	ADF ANT
622-4022-XXX	RADAR RT
622-4096-XXX	AMPLIFER



Beech 1900 | Overhaul/Repair Capability

<b>Part Number</b>	<b>Description</b>
622-4160-XXX	RAD ALT IND
622-4565-XXX	VERT GYRO
622-4938-XXX	RMI
622-5941-001	RADAR IND
622-6137-XXX	NAV RX
622-6152-XXX	TRANSCEIVER
622-6263-XXX	TRANSCEIVER DME
622-6520-XXX	VHF CTL
622-6521-XXX	NAV CTL
622-6522-XXX	ADF CTL
622-6523-XXX	ATC CTL
622-6524-XXX	DME IND
622-6590-XXX	ADF ADP
622-7337-XXX	WEATHER RADAR
64050-660-X	AIRSPEED IND, STBY
64111-900-1	ALTIMETER (PNEU)
641-370-X	ALTIMETER STBY
787-6173-XXX	ADI
8346-5	DIFF PRESS SWITCH
89090-003-211	CVR
9-231-07	FUEL FLOW TRANSM
9302475-001	IND BATT FUEL
9302476-004	IND ITT A MODEL
93-A055-XX	REMOTE MIC
93-A100-XX	C V R
93-A152-XX	CTL UNIT CVR
965-0476-088	COMP GPW
980-6001-XXX	CVR
980-6005-XXX	CVR
980-6019-XXX	CVR
D494-10-001	LNDG GEAR CTRL
DL1028M61-3	TRIM TAB ACT
DL3827M1-X	TRIM TAB ACT
H341ADM2	STDBY GYRO HOR
PC-250	INVERTER
SPC-38	INVERTER
SX7EL11	DC POWER PANEL
XW21121-256-XX	WINDSHIELD CONVERTER
XW21160-XX	WINDSHIELD MOTOR