



King Air

OVERHAUL/REPAIR CAPABILITY LIST

Alphanumeric



King Air Overhaul/Repair Capability

Part Number	Description
060-0015-00	GENERATOR CONTROL UNIT
064-1015-01	DIRECTIONAL GYRO
064-1017-01	HF RT W/SELCAL
066-01143-0601	HF POWER AMPLIFIER/COUPLER
066-3060-00	TRANSPONDER
066-3062-0X	KNO582
071-01519-0101	ENCODING ALTIMETER
100-0034-04	RADR R/T
1001-380012-3	PROP TACH INDICATOR
	CONTROL, DIMMER

Part Number	Description
100-340485-5	PC BOARD
100-364179-1	CONTROL, A/C
100-364216-13	PC BOARD
100-364216-15	PC BOARD
100-364217-13	ANNUNCIATOR,CONTROL
100-364217-7	PC BOARD
100-364285-1	PC BOARD
100-364285-11	PC BOARD
100-364295-3	CONTROLLER,W/S TEMP
100-384042-1	AMMETER,PROP
100-384043-9	INDICATOR,AIRSPEED
100-384048-17	INDICATOR,TORQUE
100-384048-3	INDIDCATOR,TORQUE
100-384048-5	INDICATOR,TORQUE
100-384050-5	INDICATOR,OIL PRESS
100-384054-1	INDICATOR,VERTICAL SPEED
100-384058-3	INDICIATOR, OIL PRESS TEMP
100-384085-1	DC VOLTMETER
100-384117-3	INDICATOR,OIL PRESS TEMP
100-384117-7	INDICATOR,OIL PRESS TEMP
100-384117-9	INDICATOR,OIL PRESS TEMP
100-389005-11	STARTER GENERATOR
100-389014-5	STARTER GENERATOR
101-360020-17	BEACON,ASSEMBLY
101-360020-3	BEACON,ASSEMBLY
101-364270-1	GENERATOR CONTROL UNIT
101-364270-1	GENERATOR,CONTROL
101-364270-5	GENERATOR,CONTROL
101-380012-5	CONTROL,DIMMER
101-381000-9	VALVE,BLEED AIR SHUTOFF
101-381011-1	VALVE,BLEED AIR SHUTOFF
101-381011-11	VALVE,BLEED AIR SHUTOFF
101-381011-3	VALVE,BLEED AIR SHUTOFF
101-381011-5	VALVE,BLEED AIR SHUTOFF
101-381011-9	VALVE,BLEED AIR SHUTOFF
101-384004-5	BLOWER ASSEMBLY

Part Number	Description
101-384004-9	BLOWER ASSEMBLY
101-384008-3	INDICATOR,TORQUE
101-384016-5	INDICATOR, OIL PRESS TEMP
101-384029-1	INDICATOR, FLAP POSITION
101-384144-1	DISTRIBUTION VALVE
101-384165-1	MOTOR,W/S WIPER
101-389007-1	STARTER GENERATOR
101-500047-17	ELECTRIC SERVO
101-500047-21	ELECTRIC SERVO
101-500047-33	ELECTRIC SERVO
101-8001-47	WHEEL,MAIN
101-8015-3	WHEEL,NOSE ASSEMBLY
101-8027-5P	WHEEL,NOSE KIT
102464-26	CONTROL, PRESSURIZATION
102464-36	CONTROL,PRESSURIZATION
103456-4	VALVE,OUTFLOW
103460-5	VALVE,OUTFLOW
103460-7	VALVE,OUTFLOW
103570-14	VALVE,OUTFLOW
103598-12	VALVE,OUTFLOW
103598-2	VALVE,OUTFLOW
103646-1	VALVE,OUTFLOW
103648-1	VALVE,OUTFLOW
103648-13	VALVE,OUTFLOW
103648-4	VALVE,OUTFLOW
103648-5	VALVE,OUTFLOW
103648-6	VALVE,OUTFLOW
103648-7	VALVE,OUTFLOW
114-380004-7	INDICATOR,ITT
114-380006-5	INDICATOR,PROP TACH
114-380007-5	INDICATOR,TACH
114-380008-1	INDICATOR,FUEL FLOW
114-380009-3	INDICATOR, OIL PRESS TEMP
114-380009-5	INDICATOR, OIL PRESS TEMP
114-380011-3	INDICATOR. TURN & BANK
114-380012-3	INDICATOR,AIRSPEED

Part Number	Description
114-380015-1	INDICATOR,PROP SYNC
114-380017-5	INDICATOR,CABIN DIFF
114-380018-1	INDICATOR,CABIN CLIMB
114-380019-1	INDICATOR, FLAP POSITION
114-380020-1	INDICATOR, CABIN AIRTEMP
130346-1	CONTROL, PRESSURIZATION
130346-1	PRESSURIZATION CONTROL
130346-11	CONTROL, PRESSURIZATION
130346-12	CONTROL, PRESSURIZATION
130346-6	CONTROL, PRESSURIZATION
130346-7	CONTROL, PRESSURIZATION
130374-22	CONTROL, PRESSURIZATION
130374-29	CONTROL, PRESSURIZATION
130398-2	PRESSURIZATION CONTROL
152C208L	INDICATOR,ITT
152C208M	INDICATOR,ITT
152C208T	INDICATOR,ITT
152C208U	INDICATOR,ITT
152LC208H	INDICATOR,ITT
1532-11D	VALVE,DISTRIBUTION
1532-3	VALVE,DISTRIBUTION
1532-3A	VALVE,DISTRIBUTION
1532-3B	VALVE,DISTRIBUTION
1532-3C	VALVE,DISTRIBUTION
1U149-001-6	HORIZON GYRO
2100-1020-00	SOLID STATE COCKPIT RECORDER
2100-1020-02	SOLID STATE COCKPIT VOICE REC
23046-006	GENERATOR,STARTER
23048-016	GENERATOR,STARTER
23048-018	GENERATOR,STARTER
23069-015	STARTER GENERATOR
23069-016	STARTER GENERATOR
23079-000-1	STARTER GENERATOR
23080-011	STARTER GENERATOR
23085-001	GENERATOR,STARTER
2587193-43	DIRECTIONAL GYRO

Part Number	Description
3010036	GOVERNOR, FUEL TOPPING
3017957	NOZZLE, FUEL
3019424	NOZZLE, FUEL
3019906	DIVIDER, FUEL FLOW
3022954	BLEED VALVE
3022954	VALVE,BLEED
3027249	VALVE,BLEED
3027427	VALVE,BLEED
3027631	VALVE,BLEED
3029174	VALVE,BLEED
3031971	NOZZLE FUEL
3100829	VALVE,BLEED
3100922	VALVE,BLEED
3100923	VALVE,BLEED
3103174-04	VALVE,BLEED
3-1209-2	WHEEL,NOSE ASSEMBLY
328A-3G	SLAVING AMP
331A-3G	HSI
331A-6P	COURSE INDICATOR
332C-10	RMI
332D-11A	VERTICAL GYRO
332-D11T	VERTICAL GYRO
332E-4	DIRECTIONAL GYRO
334C-11	PRIMARY SERVO
334C-9A	PRIMARY SERVO
334D-6	TRIM SERVO
334D-6A	TRIM SERVO
40-0100-1	BEACON,ROTATING
40-0127-1	BEACON,ROTATING
40-0127-1C	BEACON,ASSEMBLY
4706-22	VALVE,SHUTOFF
4706-23	VALVE,SHUTOFF
4706-24	VALVE,SHUTOFF
4706-4	VALVE,SHUTOFF
4706-5A	VALVE,SHUTOFF
4711-5	VALVE,SHUTOFF

Part Number	Description
50-300011-133	WHEEL,ASSEMBLY
50-300011-41	WHEEL,ASSEMBLY
5035P-P46	ENCODING ALTIMETER
50-364266-27	BEACON
50-380076-5	GENERATOR,STARTER
50-580076-3	GENERATOR,STARTER
509-0001-904	TURN AND BANK INDICATOR
509-0001-910	TURN AND BANK INDICATOR
51530-001 SERIES	GENERATOR,CONTROL
51530-007B	GENERATOR,CONTROL
51538-001A	GENERATOR,CONTROL
521216	INDICATOR,OIL PRESS/TEMP
521372	INDICATOR,OIL PRESS/TEMP
521944	INDICATOR, ITT
522-2638-006	HSI
522-2644-011	SLAVING AMP
522293	INDICATOR,ITT
522-3241-000	DIRECTIONAL GYRO
522325	INDICATOR,ITT
562287	DC LOADMETER
562-805	VOLT LOAD METER
570-531	AC VOLT/FREQ METER
60-1750-3	POWER SUPPLY
622-055-003	INDICATOR
622-0555-00X	RMI
622-0876-201	NAV RECEIVER VIR-30A
622-0965-003	ELEVATOR SERVO
622-0965-00X	TRIM SERVO
622-1204-003	RADIO ALITMETER INDICATOR
622-1233-001	DME-40
622-1270-001	ATC XPONDER TDR-90
622-2362-001	ADF-60A
622-2501-001	RADAR ANTENNA
622-2504-001	RADAR ANTENNA
622-2733-001	ELEVATOR SERVO
622-2733-002	ELEVATOR SERVO

Part Number	Description
622-2855-0X1	RADIO ALTIMETER
622-2937-004	RADIO ALTIMETER INDICATOR
622-3201-001	RADIO ALTIMETER
622-3260-001	TRIM SERVO
622-3975-003	ENCODING ALTIMETER
622-3975-004	ENCODING ALTIMETER
622-3975-005	ENCODING ALTIMETER
622-3975-014	ALTIMETER
622-4160-015	DRI-55
622-4394-001	CONTROLLER
622-4565-00X	VERTICAL GYRO
622-4938-007	RMI INDICATOR
622-6136-002	DIRECTIONAL GYRO
622-6137-001	VIR 32
622-6137-201	VIR 32 NAV RECEIVER
622-6152-001	VHF COMM TRANSEIVER
622-6152-011	VHF COMM RECEIVER
622-6293-003	DME RT
622-6521-013	CONTROLLER
622-7292-101	VHF COMM
622-7337-001	RADAR R/T
7000466-902	ATTITUDE DIRECTION INDICATOR
7000622-901	VG14A GYRO
7000839-902	RADIO ALTIMETER INDICATOR
787-6385-003	COURSE INDICATOR
792-6694-001	VERTICAL GYRO
8DJ81AAP1	PROP TACH INDICATOR
8DJ81BLB4	PROP TACH INDICATOR
8DJ81WBA4	TURBINE TACH INDICATOR
93-A100-80	COCKPIT VOICE RECORDER
99-380010-3	VALVE, BLEEDAIR SHUTOFF
99-8003-7	MLG WHEEL, ASSY (FLOTATION)
99-8004-3	WHEEL, MLG ASSEMBLY
ALT-55B	RADIO ALTIMETER
ANT-312	RADAR ANTENNA
ANT-318	RADAR ANTENNA

Part Number	Description
ART-2000	RADAR R/T
BYLB50822	VALVE,BLEEDAIR SHUTOFF
BYLB50824	VALVE, BYPASS
BYLB51089	VALVE,SHUTOFF
C-14A	DIRECTIONAL GYRO
EM609-3	BLOWER ASSEMBLY
EM609-4	BLOWER ASSEMBLY
EM8001	TACH GENERATOR
G7740-7-44	BEACON
G7740-A19-24	BEACON,ROTATING
KEA-346	ENCODING ALTIMETER
KG-102A	DIRECTIONAL GYRO
LT-52A	DIMMER
MI585350-5	RADAR
PC125	STATIC INVERTER
PC15A	STATIC INVERTER
PC15BC	STATIC INVERTER
PC17	STATIC INVERTER
PC17-3	STATIC INVERTER
PC17A	STATIC INVERTER
PC250	STATIC INVERTER
PC251	STATIC INVERTER
PC350	STATIC INVERTER
SR-2AG	TORQUE INDICATOR
SR-2AM	TORQUE INDICATOR
SRL-C2C	TORQUE INDICATOR
SRL-C2F	TORQUE INDICATOR
SRL-C8C	FUEL FLOW INDICATOR
TDR-90	TRANSPONDER
TDR-94D	MODE S TRANSPONDER
WXT-250B	RADAR R/T