



Master List

OVERHAUL/REPAIR CAPABILITY LIST



Master List | Overhaul/Repair Capability

Part Number	Description
060-0015-00	DIRECTIONAL GYRO
060-0017-00	FLIGHT DIRECTOR
064-1023-00	VHF COMM 1
064-1023-02	COMM TRANSCEIVER
064-1023-xx	TRANSCEIVER VHF/COM
065-0053-XX	ATTITUDE SELECTOR
065-0058-01	ANNUNCIATOR PANEL
065-0059-01	PITCH SERVO
065-0060-01	PRIMARY SERVO
065-0061-36	TRIM SERVO
066-01072-0004	RECEIVER, ADF
066-01148-0102	GPS RECEIVER
066-1053-00	TRANSPONDER
066-1055-03	AUDIO CONTROL PANEL
066-1055-52	AUDIO PANEL
066-1055-71	AUDIO PANEL
066-1062-XX	TRANSPONDER
066-1063-00	GLIDESLOPE RECEIVER
066-1066-23	DME 1
066-1067-XX	NAV REC
066-1069-00	DME INDICATOR
066-1069-XX	DME IND
066-1071-00	ATC TRANSPONDER
066-1072-00	ADF RECEIVER
066-1072-XX	ADF REC
066-1078-04	NAV RECEIVER
066-3031-01	HEIGHT DEVIATION INDICATOR
066-3034-04	VOR/GS INDICATOR
066-3034-12	INDICATOR
066-3034-XX	NAV IND
066-3042-00	RMI
066-3056-00	INDICATOR
066-3060-00	RMI
066-3062-008	ENCODING ALTIMETER
066-3062-02	ALTIMERER
066-3062-XX	ENC ALT
066-3063-00	INDICATOR
066-3114-00	RADAR INDICATOR
066-3114-XX	RADAR INDICATOR
066-4009-00	VOR/LOC CONVERTER



Master List | Overhaul/Repair Capability

Part Number	Description
066-4010-XX	NAV COMP
069-1024-XX	VHF NAVCOM RADIO SET
069-1025-05	NAV / COMM / ILS
069-1025-26	NAV / COMM / ILS
071-01519-0101	RADAR R/T
071-1192-22	TRANSPONDER CONTROL
071-1210-04	ADF CONTROL
071-1210-17	ADF CONTROL
071-1215-24	VHF COMM. CONTROL UNIT
071-1215-31	COM CONTROL
071-1215-35	VHF COMM CONTROL HEAD
071-1216-17	NAV CONTROL
071-1234-00	ADF ANTENNA
071-1276-08	CONTROL UNIT
071-1276-22	TRANSPONDER CONTROL
071-1282-31	COM CONTROL
071-1282-39	VHF CONTROL HEAD
071-1283-26	NAV CONTROL
071-1284-04	ADF CONTROL UNIT
071-1378-00	RADAR R/T
100-0034-04	PROP TACH INDICATOR
10-0055-11	EMERGENCY LIGHT
10010-0000-02	FUEL QYT IND
10010-0000-XX	FUEL QYT IND
1-002-0102-X	STATIC INVERTER
10028-101	TORQUE TRANSDUCER
10028-102	TORQUE TRANSMITTER
10028-103	TORQUE TRANSMITTER
10028-104	TORQUE TRANSMITTER
10028-105	TORQUE TRANSMITTER
101-384144-1	DISTRIBUTION VALVE
10167N01W00	FUEL QUANTITY REPEATER IN
10167N02W00	TORQUE PRESSURE INDICATOR
10168N01T00	TURBINE TEMP IND
10170N01R00	HIGH PRESSURE ROTOR SPEED
101720-11810	ALTIMETER,3-POINTER 20K DUAL SCALE
102-0059-XX	HORIZON GYRO
102076-11	AIR PRESSURE OUTFLOW VALVE CONTROL
10224N01R00	GAS GENERATOR SPEED INDICATOR
10227N01T00	I.T.T. INDICATOR



Master List | Overhaul/Repair Capability

Part Number	Description
102340-10	CABIN PRESS CONTROLLER
10251N01T00	I.T.T. INDICATOR
103462-3	VALVE, DUMP
103464-7	VALVE, OUTFLOW
103598-2	OUTFLOW VALVE
103646-1	OUTFLOW SAFETY/VALVE
103648-13	OUTFLOW VALVE
103648-4	OUTFLOW VALVE
103648-5	OUTFLOW VALVE
103648-6	OUTFLOW VALVE
103648-7	OUTFLOW VALVE
103680-4	OUTFLOW VALVE
103682-1	OUTFLOW VALVE
10388N01C00	CABIN PRESSURE INDICATOR
10388N02C00	CABIN PRESSURE INDICATOR
10446N02W00	INDICATOR, TORQUEMETER
107312-10	PNEUMATIC RELAY ASSEMBLY
11-0283-3	EXIT LIGHT SUB/ASSY
114-380007-5	TURBINE TACH IND
114-380008-1	FUEL FLOW IND
114-380009-X	OIL TEMP IND
114-380010-1	TURN & BANK IND
114-380012-3	AIRSPEED IND
114-380027-3	PNEU IND
114-380034-9	FUEL QTY IND
114-380035-X	INST VERT IND
114-380039-1	EJECTOR BYPASS VALVE
114-380049-X	PROP DEICE IND
118-380000-1	FUEL QTY UC TY
123-02328-401	STEERING HANDWHEEL
123-02328-403	STEERING HANDWHEEL
124.1013-X	INDICATOR, ENGINE OIL TEMP/PRESS
124.444-XX	INDICATOR, TURBINE OUTLET TEMP
124.560-1	TORQUE INDICATOR
124.677-1	ENG OIL TEMP AND PRESS IND
124623-01-14	GYRO, VERTICAL
130346-1	PRESSURIZATION CONTROL
130374-22	CABIN PRESSURE CONTROL
130398-2	PRESSURIZATION CONTROL
130538-1	CABIN PRESS CTRL



Master List | Overhaul/Repair Capability

Part Number	Description
1311-04	ANUC PANEL
1312-03	INDICATOR SWITCH
131358-7	Auxiliary Volume Tank
1378-1B	CONTROL, ANTI-ICE
140100-01-01	ATTITUDE DIRECTOR IND
14-01321-00	MOTOR, WIPER
140538	CABIN PRESSURE CONTROL SYSTEM
14-91326-03	MOTOR, WIPER
152BL801C	EXH GAS TEMP
152BL801D	ENGINE EGT
152BL801E	EXH GAS TEMP
152BL802B	4-PIN APU EGT
1532-3B	DISTRIBUTION VALVE
1532-3C	DISTRIBUTION VALVE
153LCA8	AMMETER
154BS101-1	MODULAR POWER SYSTEM
155751	ALTIMETER ENCODER
15866-1X	VERTICAL GYRO
161B101	TEMPERATURE IND.
161BL501	TEMPERATURE IND.
162B243	IND OIL TEMP
162B3X	INDICATOR, TEMPERATURE RATIO
162B43	INDICATOR, TEMPERATURE
162B48	AIR TEMP IND.
162BL505	TEMP INDICATOR
162BL701	FUEL TEMP
162BL902	TEMP INDICATOR
162BL903	TEMP INDICATOR
163B2	INDICATOR, TEMP
163B2D	INDICATOR, TEMP
163BL501	TEMP INDICATOR
163BL511	TEMP INDICATOR
17-101	ALTITUDE WARNING
1784460-656	COMPASS, INDICATOR
1784460-XXX	GYROSYN COMPASS IND.
17M800	FLIGHT DATA RECORDER
1976910-1	ATTITUDE INDICATOR
1976910-2	ATTITUDE INDICATOR
1976910-3	ATTITUDE INDICATOR
1978128-1	ATTITUDE INDICATOR



Master List | Overhaul/Repair Capability

Part Number	Description
1978191-1	ATTITUDE INDICATOR
1990529-1	ATTITUDE INDICATOR
19A2724	BLOWER VANAXIAL
1U149-001-6	HORIZON GYRO
20046-1	HEADSET ASSEMBLY
20069-010	STARTER
206-075-188-005	INDICATOR, XMSN OIL TEMP/PRESS
206-075-607-101	INDICATOR, ATTITUDE GYRO
206-075-677-1XX	INDICATOR, ENGINE OIL TEMP/PRESS
206-075-680-1XX	INDICATOR, TURBINE OUTLET TEMP
206-076-031-XXX	HYDRAULIC ACTUATOR
206-076-062-XXX	HYDRAULIC ACTUATOR
2067631-X	RADIO ALTIMETER
2067635-X	INA-51A INDICATOR
2067968-0701	INA-51B INDICATOR
207	PA AMP
2070409-0101	RADAR ANTENNA
2070409-0XXX	RADAR ANTENNA
2070410-0XXX	RADAR XMTR/RECEIVER
2070412-0XXX	RADAR CONTROL
2070943-0101	RADAR INDICATOR
2070943-0103	RADAR INDICATOR
2070943-X	RADAR INDICATOR
210-187-00	LOAD CELL
2101990-3	SRL CONTROLLER
21140-1134-2	INDICATOR
2117804-3	CONTROL
2117966-2	CONTROLLER
211C228-2	SWITCH, HYDRAULIC PR
2-1203-3	BRAKE ASSY
214-060-056-109	DC STARTER
214-073-917-101	BLOWER VANAXIAL
214-073-932-109	WINDSHIELD WIPER GEARCASE
214-073-932-110	WIND WIPER GEARCASE
214-074-300-107	AFCS ENGAGE PANEL
214-075-244-001	RATE GYRO TRANSMITTER
214-076-161-101	HYD ACTUATOR ASSY
214-076-161-103	HYD ACTUATOR ASSY
214-076-161-107	HYD ACTUATOR ASSY
214-076-294-101	ACTUATOR DUEL DIRECT



Master List | Overhaul/Repair Capability

Part Number	Description
214-175-104-101	STATIC INVERTER
214-175-140-101	POWER SUPPLY
214-175-150-105	DC GENERATOR
214-175-153-105	DC VOLTAGE REGULATOR
214-175-253-103	ENG OIL TEMP AND PRESS IND
217-05111	DE-ICE PRESS IND.
21B17-10-B	PANEL, SUPERVISORY
22702-031	ENCODING ALTIMETER
22722-004	ALTITUDE ALERTER
22722-034	ALTITUDE ALERTER
23048-016	STARTER GENERATOR
23048-018	STARTER GENERATOR
23069-015	STARTER GENERATOR
23069-016	STARTER GENERATOR
23079-000-1	STARTER GENERATOR
23079-005	STARTER GENERATOR
23079-009	STARTER GENERATOR
23080-005	STARTER GENERATOR
23080-011	STARTER GENERATOR
23080-064	STARTER GENERATOR
23080-series	STARTER GENERATOR
23081-018	STARTER-GENERATOR
23085-001	STARTER GENERATOR
23088-002B	GENERATOR DC
23088-SERIES	STARTER GENERATORS
23091-002	STARTER GENERATOR
2586261-1	DIGITAL COMPASS CONTROLLER
2586333-3	DG
2587193-3	C-14 DIR GYRO
2587193-42	DIRECTIONAL GYRO
2587193-43	DIRECTIONAL GYRO
2587193-XX	DIRECTIONAL GYRO
2587335-11	VERTICAL GYRO VG311
2588282-XXX	GYROSYN COMPASS IND.
2588302-4	GYRO, DIRECTIONAL
2589226-1	AMPLIFIER POWER SUPPLY
2593742-41	VERTICAL GYRO
26-86026-005	GEAR FLAP INDICATOR
270-2436-040	CONTROL, TRANSPONDER
27-19025-007	AMMETER



Master List | Overhaul/Repair Capability

Part Number	Description
27-19037-007	INDICATOR, AWI
27-19116-003	AMMETER
27-19116-005	AMMETER
27-19117-001	VOLMETER
27-19118-009	TRIMETER
27-19118-011	TRIMETER
27-19119-003	INDICATOR, FLAP POSITION
27-19121-3	HYDRAULIC PRESS IND
27-19122-001	INDICATOR, SUCTION
27-19123-005	INDICATOR, OXY PRESS
27-19124-3	PRESSURE IND
27-19133-005	INDICATOR, PITCH TRIM
27-19134-001	TURN AND BANK
27-19135-001	CLOCK
27-19136-001	VSI/RATE OF CLIMB
27-19137-023	AIRSPEED INDICATOR
27-19137-031	AIRSPEED INDCATOR
27-19139-001	VSI/RATE OF CLIMB
27-19144-005	INDICATOR, AWI
27-19144-007	INDICATOR, AWI
27-19144-009	AWI QTY GAUGE
27-19145-003	INDICATOR, CABIN AIR TEMP
27-19145-005	INDICATOR, CABIN AIR TEMP
27-19145-7	CABIN TEMP INDICATOR
27-19149-003	EGT IND
27-19157-003	%RPM INDICATOR
27-19158-007	%TORQUE INDICATOR
27-19160-001	OIL TEMP PRESS IND
27-19160-5	OIL TEMP PRESS IND
27-19161-1	FUEL PRESS IND
27-19167-001	TURN AND SLIP
27-19171-1	SAS INDICATOR
27-19193-001	AIRSPEED INDICATOR
27-19193-009	AIRSPEED INDICATOR
27-19193-027	AIRSPEED INDICATOR
27-19193-23	AIRSPEED INIDCATOR
27-19313-001	EGT INDICATOR
272D015-1	ATTENDANT'S HANDSET
272D415-1	HANDSET
272D415-2	HANDSET



Master List | Overhaul/Repair Capability

Part Number	Description
272D415-3	HANDSET
272D420-1	HANDSET
272D420-2	HANDSET
272D420-3	HANDSET
272D425-1	HANDSET
272D425-2	HANDSET
272D425-3	HANDSET
272D455-1	HANDSET
272D455-2	HANDSET
272D455-3	HANDSET
272D460-1	HANDSET
272D460-2	HANDSET
272D460-3	HANDSET
272D465-1	HANDSET
272D465-2	HANDSET
272D465-3	HANDSET
272D495-1	HANDSET
272D495-2	HANDSET
27-36053-001	ACTUATOR, FLAP
27-44049-027	SAS SERVO
27-66010-009	TORQUE IND
27-82135-003	INDICATOR , CABIN AIR TEMP
27-82168-007	CONTROL BOX PITCH
27-82174-073	ANNUNCIATOR PANEL
27-82174-085	ANNUNCIATOR PANEL
27-82174-109	ANNUNCIATOR PANEL
27-82174-111	ANNUNCIATOR PANEL
27-82174-121	ANNUNCIATOR PANEL
27-82174-151	ANNUNCIATOR PANEL
27-82174-173	ANNUNCIATOR PANEL
27-82176-053	CONTROL BOX, AWI
27-82176-071	CONTROL BOX, AWI
27-82181-019	CONTROL BOX, SAS
27-82181-023	CONTROL BOX, SAS
27-82186-033	INDICATOR, GEAR POSITION
27-82186-057	GEAR POSITION INDICATOR
27-82425-029	CONTROL BOX, FLAP
27-82425-031	CONTROL BOX, FLAP
27-82582-007	WIPER CONTROL
27-82719-007	ROTATING BEACON



Master List | Overhaul/Repair Capability

Part Number	Description
30012-0000-X	SIGNAL CONDITIONER
30012-0000-XX	SIGNAL CONDITIONER
300-14L	GYRO DIRECTIONAL
30-0467-5	STROBE LIGHT
30076-007	DC GENERATOR
30081-001	DC GENERATOR
300SG119Q	STARTER GENERATOR
305538-3	SWITCH, SPEED
3103235-11	FUEL NOZZLE
3103235-8	FUEL NOZZLE
3103235-9	FUEL NOZZLE
31342-XXX	AC PWR GENERATOR
319980-13-1	VALVE
32005-007	GENERATOR, TACH
32005-023	GENERATOR/TACHOMETER
32-19023-001	SAS SERVO
32-19027-001	MODULE, FIRE LOGIC
3252010-1101	ALTIMETER, PRESSURE
3252013-1101	ALTIMETER, ENCODING
3252028-0101	ALTIMETER, ENCODING
328A-3G	SLAVING AMP
331A-3G	HIS
331A-6P	COURSE INDICATOR
332C-10	RMI
332D-11A	VERTICAL GYRO
332-D11T	VERTICAL GYRO
332E-4	DIRECTIONAL GYRO
33370945	MODULE, FIRE IND
3337L-B-X-X-X	RADIO MAGNETIC INDICATOR
334C-11	PRIMARY SERVO
334C-9A	PRIMARY SERVO
334D-6	TRIM SERVO
334D-6A	TRIM SERVO
345C-2A	ACCELERATION SENSOR
35-62190-00XX	RELAY BOX
35-66176-0005	RELAY BOX
36D831711G4	DC STARTER
3911213-9009	MGT INDICATOR
392908-1-1	VALVE, REGULATING
3940233-9003	INDICATOR, GAS PRODUCER



Master List | Overhaul/Repair Capability

Part Number	Description
3941213-9009	GAS PRODUCER TACH INDICATOR
394233-9006	INDICATOR, DUAL TACHOMETER
39948-E2803	AIRSPEED INDICATOR
3D1472	TIMER, WING DEICE
3D1472-11	DE-ICE TIMER
3D2372-021	VALVE REGULATOR
3E1389-10	PROP DE-ICE AMP METER
3E1964-1	TIMER PROP DEICE
3E1964-3	TIMER, PROP DEICE
3E1964-4	DE-ICE TIMER
4000874-8201	GYRO DIRECTIONAL
4000946-5201	RADAR INDICATOR
4000946-5202	RADAR INDICATOR
40-0100-1	ROTATING BEACON
4001018-6102	RADAR R/T
4001018-6104	RADAR R/T
4001018-6106	RADAR R/T
4001018-6108	RADAR R/T
4002963-901	RMI INDICATOR
4006451-0501	CAPSTAN
4006719-904	SERVO DR.
4006719-913	SERVO DR.
4014267-901	RADAR ALTIMETER IND
40143	HYDRAULIC PUMP
4016341-05	ALTIMETER
4016341-903	ALTIMETER
4016341-906	ENCODER
4020531-574	GYRO, HORIZON
4027170-904	HORIZON IND
418-04014	FUEL PRESS TRANS
4300-6980L	INDICATOR, ATTITUDE GYRO
4300-8220L	INDICATOR, ATTITUDE GYRO
4349-150-80-10	RUDDER TRIM POSITION IND
4350-150-80-10	AILERON TRIM POSITION IND
4426-425-00-00	FLAP INDICATOR
4428-150-80-11	INDICATOR
449-X	0-5 VDC LAMP POWER SUPPLY
45100-E2111	ALITUDE PRESLECT
497-0014-XXX	ATTENDANTS CRADLE
497-0100-XXX	ATTENDANTS HANDSET



Master List | Overhaul/Repair Capability

Part Number	Description
497-0114-XXX	FLIGHT DECK CRADLE
500DC	INDICATOR, ATTITUDE GYRO
501-1197-09	EMERGENCY GYRO
501-1228-004	EMERGENCY POWER SUPPLY
501-1228-03	POWER UNIT
501-1228-series	POWER SUPPLY
501-1478-XX	CAPSTAN
501-1533-51	ATTITUDE INDICATOR
50284001	DETECTOR, FAULT
50284-003	D.C. GROUND FAULT PROTECTION UNIT
5035P-P45	ALTIMETER, ENCODING
5035P-P46	ENCODING ALTIMETER
504-0017-901	ARTIFICIAL HORIZON
504-0017-908	ARTIFICIAL HORIZON
504-0017-909	GYRO HORIZON
504-0017-914	GYRO HORZ.
504-0017-916	ARTIFICIAL HORIZON
504-0017-917	ADI
504-0017-921	ARTIFICIAL HORIZON
504-0021-901	HRI/ATTITUDE INDICATOR
504-0021-903	HRI/ATTITUDE INDICATOR
504-0021-908	GYRO HORIZON
504-0021-910	HRI/ATTITUDE INDICATOR
504-0030-911	GYRO HORIZON
504-0038-X	IND PILOT GYRO
509-0001-904	TURN & BANK INDICATOR
509-0001-910	TURN & BANK INDICATOR
51509-002	GENERATOR CONTROL UNIT
51509-002B	GENERATOR CONTROL UNIT
51509-002R	GENERATOR CONTROL UNIT
51509-XXX	GCU
51530-001A	GENERATOR CONTROL UNIT
51530-007B	GENERATOR CONTROL UNIT
51530-XXX	GCU
51538-001A	GENERATOR CONTROL UNIT
51538-XXX	GCU
51539-002A	G.C.U.
51539-005B	GENERATOR CONTROL UNIT
51539-014A	GENERATOR CONTROL UNIT
51539-SERIES	GENERATOR CONTROL UNITS



Master List | Overhaul/Repair Capability

Part Number	Description
51549-001A	GENERATOR CONTROL UNIT
51576-003	DC VOLTAGE REGULATOR
51634-001	GCU
51634-XXX	GENERATOR CONTROL UNIT
5170-1-9	DIGITAL REU
520-7100-001	RMI CONVERTER
522-0875-006	AMPLIFIER
522-0875-XXX	AIRCRAFT AMPLIFIER
522-1859-0XX	DISTANCE INDICATOR
522-1936-047	SLAVE IND
522-2357-016	ADF CONTROL UNIT
522-2357-017	RECEIVER, ADF
522-2357-028	ADF CONTROL UNIT
522-2357-036	ADF CONTROL UNIT
522-2450-014	VOR/ILS RECEIVER
522-2450-0XX	VOR/ILS RECEIVER
522-2450-114	VOR/ILS RECEIVER
522-2450-115	RCVR 51RVI
522-2638-001	HSI/COURSE INDICATOR
522-2638-006	HSI/COURSE INDICATOR
522-2638-007	HSI/COURSE INDICATOR
522-2638-009	COURSE INDICATOR
522-2638-XXX	HOR. SIT. IND.
522-2644-011	SLAVING ACCESSORY
522-2782-004	HIS INDICATOR
522-2996-000	MARKER BEACON
522-2996-011	MARKER BEACON REC.
522-2996-018	MARKER BEACON REC.
522-2996-XXX	MARKER BEACON REC.
522-3073-000	C DEV IND
522-3073-012	C DEV IND
522-3120-004	AMPLIFIER
522-3120-005	INSTRUMENT AM
522-3120-006	INSTRUMENT AMPLIFIER
522-3138-0XX	COURSE INDICATOR
522-3206-008	FLIGHT DIRECTOR IND.
522-3206-0XX	FLIGHT DIRECTOR IND.
522-3241-000	Directional Gyro
522-3343-0XX	DISTANCE INDICATOR
522-3487-0XX	FLIGHT DIRECTOR



Master List | Overhaul/Repair Capability

Part Number	Description
522-3614-000	VHF COMM CONTROL
522-3616-202	VHF NAV CONTROL
522-3617-000	VHF COMM CONTROL
522-3618-0XX	ATTITUDE DIR. IND.
522-3698-002	RADIO ALTIMETER
522-3698-003	RADIO ALTIMETER
522-3698-004	RADIO ALTIMETER
522-3698-005	RADIO ALTIMETER
522-3698-006	RADIO ALTIMETER
522-3752-0XX	FLIGHT DIRECTOR IND.
522-3768-0XX	FLIGHT DIRECTOR CTRL
522-3867-0XX	FLIGHT DIRECTOR IND.
522387	CABIN AIR TEMP INDICATOR
522-3875-001	HORZ SIT IND
522-3877-001	FLIGHT DIRECTOR ADI
522-3908-0XX	FLIGHT DIRECTOR IND.
522-3948-0XX	COMPARATOR MONITOR
522396	HYDRAULIC OIL QTY IND
522406	D C AMP/VOLT METER
522-4088-003	VHF RECEIVER
522-4088-009	XCVR
522-4088-203	VHF/COMM 618M-2
522-4088-X	VHF TRANSCEIVER
522-4088-XXX	VHF TRANSCEIVER
522-4089-209	VHF TRANSCEIVER
522-4089-X	VHF TRANSCEIVER
522-4089-XXX	VHF TRANSCEIVER
522-4114-003	RAD ALT INDICATOR
522-4114-006	INDICATOR, RADIO ALTIMETER
522-4114-XXX	RADIO ALTITUDE IND.
522-4280-XXX	VOR/ILS RECEIVER
522-4363-0XX	RADIO ALTITUDE IND.
522-4945-001	FLUX DETECTOR, COMPASS
522541	AMMETER
522542	CABIN TEMP SENSOR
522543	EGT INDICATOR
522544	RPM INDICATOR
522545	TEMP MONITOR BATTERY
522781	FUEL TOTAL IND
522783	CABIN PRESS IND



Master List | Overhaul/Repair Capability

Part Number	Description
522792	PROPELLER IND
522794	OIL PRESS TEMP ENG IND
522795	PROP OIL/TEMP IND
522796	DUAL HYDRAULIC PRESSURE IND
522797	IND HYD BRAKE
522809	BATT/FUEL TEMP IND
522823	TORQUE PRESSURE INDICATOR
522834	TRIM POS IND
522840	HYDRAULIC FLUID INDICATOR
522858	DUAL FLAP POSITION INDICATOR
522861	I.T.T INDICATOR
522948	TORQUE IND
523029	EGT IND.
523244	FUEL TEMP IND
523250	HYD PRESS IND
523267	IND CABIN TEMP
523347	ITT IND
5347-700-80-10	DUAL LP ROTOR SPEED (NL) IND
540-22722-034	ALTITUDE ALERTER
5506L-SG512	ALT ALERTER
5550-8340-N1L	TURN AND BANK IND.
562-805	VOLT LOAD METER
570-531	AC VOLT/FREQ METER
571-29020-412	ALTIMETER COPILOT/PH
5934PA1	ALTIMETER
5934PA1A86	ALTIMETER
5934PA-1A86	ALTIMETER
59500000-X	DUAL DME INDICATOR
60-1321-1	EMERGENCY EXIT LIGHT
60-1750-3	POWER SUPPLY
602T	HAND MIC
60-3269-1	POWER SUPPLY
60-3844-1	EMERGENCY LITES POWER SUPPLY
60-3844-3	POWER SUPPLY
60-3895-1	OWER SUPPLY
622-0555-003	RMI
622-0555-005	RMI
622-0555-00X	RMI
622-0876-001	RADIO NAVIGATION
622-0877-001	NAV RECEIVER



Master List | Overhaul/Repair Capability

Part Number	Description
622-0965-003	ELEVATOR SERVO
622-0965-00X	TRIM SERVO
622-1032-001	RMI DRIVER
622-1181-0XX	VHF TRANSCEIVER
622-1181-X	VHF TRANSCEIVER
622-1204-004	RADIO ALTIMETER
622-1204-XXX	RADAR ALTIMETER IND
622-1233-001	DME
622-1233-012	DME INDICATOR
622-1234-013	DME INDICATOR
622-1234-016	DME INDICATOR
622-1270-001	TRANSPONDER
622-1334-001	VHF COMM TRANSCEIVER
622-1334-002	VHF COMM TRANSCEIVER
622-1352-002	FLIGHT DIRECTOR
622-1396-X	VHF TRANSCEIVER
622-1879-001	VHF, TRANSIEVER
622-1879-002	COM
622-1959-011	REMOTE READOUT UNIT
622-2012-011	DME INDICATOR
622-2078-001	RADIO, COMM
622-2092-001	TRANSPONDER
622-2175-004	DME INDICATOR
622-2362-001	ADF RECEIVER
622-2363-001	ADF ANTENNA
622-2501-001	RADAR ANTENNA
622-2501-XXX	RADAR ANT
622-2506-004	R.M.I.
622-2506-006	RMI INDICATOR
622-2506-008	RMI-36
622-2506-104	RAD IND
622-2733-001	ELEVATOR SERVO
622-2733-002	ELEVATOR SERVO
622-2855-001	ALT-55B
622-2855-series	RAD. ALT. TRANSCEIVER
622-2937-004	INDICATOR
622-3201-001	RADIO ALTIMETER
622-3260-001	TRIM SERVO
622-3363-001	VHF TX
622-3594-005	FLIGHT DIRECTOR



Master List | Overhaul/Repair Capability

Part Number	Description
622-3710-001	ADF ANTENNA
622-3918-001	DME INDICATOR
622-3920-001	DME INDICATOR
622-3975-XXX	ALTIMETER
622-4022-001	RADAR R/T
622-4022-XXX	RADAR RT
622-4160-017	RADIO ALT IND
622-4160-XXX	RAD ALT IND
622-4523-018	VHF. CONT
622-4524-278	CONTROLLER
622-4565-001	VERTICAL GYRO
622-4565-XXX	VERT GYRO
622-4938-001	RMI INDICATOR
622-4938-XXX	RMI
622-5734-002	SERVO
622-5734-00X	SVO-65
622-5798-010	FCP-65
622-5799-104	MAP-65
622-5941-001	RADAR IND
622-6136-002	DGS-65
622-6137-001	NAV RECEIVER
622-6137-201	NAV RECEIVER
622-6152-001	TRANSCEIVER
622-6152-002	VHF COMM RECEIVER
622-6153-001	VHF/COMM XCVR
622-6263-001	DME MEASURING EQUIPMENT
622-6263-series	DME TRANCEIVER
622-6332-001	ADS-65C
622-6389-001	VHF/COMM XCVR
622-6389-002	COM
622-6520-001	CONTROL PANEL
622-6520-007	CTL-22
622-6520-008	CONTROL
622-6520-series	COMM CONTROL HEAD
622-6521-009	PANEL CONTROL
622-6521-016	NAV CONTR
622-6521-series	NAV CONTROL HEAD
622-6522-001	CONTROL BOX
622-6522-008	ADF CONTROL
622-6522-series	ADF COMM CONTROL HEAD



Master List | Overhaul/Repair Capability

Part Number	Description
622-6523-008	CONTROL
622-6523-204	CONTROL
622-6523-series	ATC CONTROL HEAD
622-6524-003	DME IND
622-6524-series	DME IND
622-6590-001	CAD 62
622-6684-004	APP-65
622-7318-001	IND-42C
622-7318-003	DME INDICATOR
622-7318-series	DME IND
622-7337-001	RADAR R/T
622-7337-002	WEATHER RADAR
622-8332-001	CAD 31 CONTROL ADAPTER
622-8434-003	APC-65C
622-8739-001	ADF/ADR CONTROL CTL-62A
622-8740-001	ADF/ADR CONTROL CTL-62A
6300-C49A-155B1	INDICATOR, TORQUE
64050-660-1	AIRSPEED IND STBY
64050-661-1	AIR SPEED INDICATOR
64050-662-1	AIRSPEED INDICATOR STANDBY
64050-663-1	AIRSPEED INDICATOR STANDBY
64060-890-1	AIRSPEED IND
64111-900-1	ALTIMETER (PNEU)
64141-360-1	ALTIMETER
64141-361-1	ALTIMETER
64141-362-1	ALTIMETER
64141-370-1	STBY ALTIMETER
64141-372-1	ALITMETER
6501-3008	INDICATOR, GAS PRODUCER
650149-00	LINEAR ACTUATOR
650150-00	LINEAR ACTUATOR
650151-00	ILNEAR ACTUATOR
650155-00	LINEAR ACTUATOR
650156-00	LINEAR ACTUATOR
650157-00	LINEAR ACTUATOR
6607-1-41	SWITCH, PRESSURE
6607-2-1	SWITCH, PRESSURE
6607-2-12A	SWITCH, PRESSURE
66WBD300-SERIES	PUMP, AXIAL
66WBL200	PUMP, HYDRAULIC



Master List | Overhaul/Repair Capability

Part Number	Description
7000469-902	HORIZONTAL INDICATOR
7000622-901	VERTICAL GYRO
7001179-910	H.S.I.
7001179-951	INDICATOR HORIZONTAL
7001179-954	ATTITUDE INDICATOR
7001179-960	H.S.I.
7001182-902	ATTITUDE INDICATOR
7001182-909	INDICATOR ATTITUDE
7002260-722	SERVO
7002260-723	SERVO
7002260-922	SERVO
7002260-923	SERVO
7002493-902	HORIZONTAL INDICATOR
7003032-913	SERVO
700GC01Y	PDU
70-105-01	ALTITUDE ALERTER
7040	VERTICAL SPEED INDICATOR
705-7-V4	GYROSCOPIC HORIZON
705-7V42M1	GYROSCOPIC HORIZON
705-7V4M1	GYROSCOPIC HORIZON
709201-1	SWITCH ASSY
7125-2	RATE TRANSMITTER
720-15900-series	CABIN TRIPLE INDICATOR
7239060-SERIES	CTOT Panel
754661-8	CABIN TEMP CONTROLLER
754890-2	CONTROLLER TEMP
76450-01076-103	N1 TACHOMETER INDICATOR
772-5005-SERIES	FLIGHT DIRECTOR IND.
772-5006-SERIES	FLIGHT DIR. IND.
772-5006-X	FLIGHT DIR. IND.
772-5025-SERIES	HORIZONTAL SIT. IND.
772-5140-001	RATE-OF-TURN GYRO
777-1026-SERIES	HORIZONTAL SIT. IND.
777-1397-SERIES	HORIZONTAL SIT. IND.
777-1493-004	ADF CONTROL UNIT
777-1493-005	ADF CONTROL
778728-6	FAN RECIRCULATING
787-6173-013	ATTITUDE INDICATOR
787-6173-SERIES	ADI
787-6366-SERIES	ADF CONTROL UNIT



Master List | Overhaul/Repair Capability

Part Number	Description
787-6385-003	COURSE INDICATOR
792-6275-002	ADF CONTROL PANEL
792-6275-003	DUAL ADF CONTROL
792-6357-002	ATTITUDE DIRECTOR INDICATOR
792-6694-001	VERTICAL GYRO
792-6781-003	PRIMARY SERVO
7G853	SWITCH
8047/10	ALTIMETER
8047/10DH	ALTIMETER
8047/20DH	ALTIMETER
8055613-0203	RADAR INDICATOR
8095536-8101	RADAR RT
8095537-8101	RADAR IND
8160-530	STARTER GENERATOR
8346-5	DIFF PRESS SWITCH
86000-1161	CLOCK
895380-SERIES	FUEL VALVE BYPASS
897331-2	TORQUE TRANS
898149	FIRE DETECTOR
8DJ125LWV3	FUEL FLOW
8DJ131AAB1	INDICATOR, TRIPLE TAC
8DJ176LZD2	N1 TACHOMETER
8DJ176WAP2	N1 RPM
8DJ81BLB4	PROP TACH INDICATOR
8DJ81CAA2	INDICATOR, NG
8DJ81LWM2	N1 TACHOMETER
8DJ81LWN2	N2 TACHOMETER
8DJ81LWT2	TACHOMETER INDICATOR
8DJ81LXF2	INDICATOR, RRM
8DJ81LXF4	INDICATOR, RRM
8DJ81LXG2	N1 TACHOMETER
8DJ81LXH2	N2 TACHOMETER
8DJ81LXK2	N1 TACH IND
8DJ81LYT2	N1 TACHOMETER
8DJ81LYT4	N1 TACHOMETER
8DJ81LYV4	N2 TACHOMETER
8DJ81WAG2	N1 TACHOMETER
8DJ81WAG4	N1 TACHOMETER
8DJ81WBA4	TURBINE TACH INDICATOR
8DJ81WBS4	TACHOMETER INDICATOR



Master List | Overhaul/Repair Capability

Part Number	Description
8DJ81WCX4	RPM IND
8DJ88LWC2	FUEL FLOW
8DJ88LWC3	FUEL FLOW
8DJ88LWX3	FUEL FLOW
8ES006794-00	POWER SUPPLY
8SC0053	FUEL QUANTITY REPEATER IN
8SC0055	TURBINE TEMP IND
8SC0065	FLAP POSITION IND
8SC0070	INDICATOR
8SC0073	DC POWER IND
8SC0085	HYDRAULIC PRESS IND
8SC0132	BATTERY TEMP MONITOR
8SC0152	RUDDER TRIM IND
8SC0158	AILERON TRIM POSITION IND
8SC0249	FUEL TEMP IND
8SC0359	TORQUE PRESSURE INDICATOR
90-0130-7	WINDSHIELD WIPER GEARCASE
90-0130-8	WIND WIPER GEARCASE
9009-3010	INDICATOR, TEMPERATURE
9009-3013	INDICATOR, XMSN OIL TEMP/PRESS
9016-3003	INDICATOR, LOADMETER
9302342-004	TRIM POSITION INDICATOR
9302391-002	DUAL HYD BRAKE PRESS INDICATOR
9302393-001	HYD FLUID QTY INDICATOR
9302472-XXX	TORQUE INDICATOR
9302473-002	PROP SPEED (RPM) INDICATOR
9302475-001	IND BATT FUEL
9302476-004	IND ITT A MODEL
9302478-002	OIL PRESS/TEMP INDICATOR
9302481-XXX	OIL PRESS/TEMP INDICATOR
93-A055-XX	REMOTE MIC
93A100-11	C.V.R.
93-A100-30	COCKPIT VOICE RECORDER
93-A100-32	COCKPIT VOICE RECORDER
93-A100-80	COCKPIT VOICE RECORDER
93-A100-81	COCKPIT VOICE RECORDER
93A100-81	COCKPIT VOICE RECORDER
93A100-83	COCKPIT VOICE RECORDER
93A151-30	CONTROL UNIT
93A152-00	CVR CONTROL



Master List | Overhaul/Repair Capability

Part Number	Description
93A152-20	CONTROLLER, CVR PANEL
93A152-70	CVR CONTROL UNIT
9-441-01	FUEL FLOW TOTALIZER
9-464-62	INDICATOR
9-464-XX	FUEL FLOW INDICATOR
949594-()	TORQUE/TEMP LIMITER
949596-()	TEMP LIMITER
9550626-1	INDICATOR UNIT
9551A	TURN AND BANK
965-0476-088	GROUND PROX
965-0476-092	GROUND PROX
965-0476-093	GROUND PROX
980-6001-()	CVR
980-6019-001	CVR
A-2042C	PDU LEFT HAND
A-2043C	PDU RIGHT HAND
A31191-10-701	MACH NUMBER TRANS.
A32069-10-006	V.S.I.
A38119-10-006	PNEU ALTIMETER
A703B	RELAY
A-703DBH	RELAY
A-703G	RELAY
A-703GB	RELAY
A-712W	RELAY
A-719W	RELAY
A-770R	RELAY
A-770R	RELAY
A-770RM	RELAY
A-882DL	RELAY
A-DF-60A	ADF RECEIVER
ADI-55V-1	ATTITUDE DIR. IND.
AG34	TACH GENERATOR
AG44	TACH GENERATOR
ALT-55B	RADIO ALTIMETER
ANT-312	RADAR ANTENNA
ANT-318	RADAR ANTENNA
ART-2000	RADAR R/T
ASH564B-9	STATIC INVERTER
AW1842BA02	INDICATOR, TORQUEMETER
AW1842BA05	TORQUEMETER



Master List | Overhaul/Repair Capability

Part Number	Description
AW184B2A04	TORQUEMETER
B13-941.22.05.2.0	AIRCRAFT CLOCK
B45152-10-004	ALTIMETER
B45152-10-005	ALTIMETER
BTI600-200A-1	AMP
BTI600-202M-1	BATTERY INDICATOR
BYLF51175	SENSOR
BYLF51581	SENSOR
C-14A	DIRECTIONAL GYRO
C45501-10-002	ENDODING ALT
C-5C	STANDBY COMPASS
C661030-0301	TURN AND BANK INDICATOR
CTL-230	HF CONTROL
CTL-92	CONTROL
D-31C	3PDT CONTACTOR
D3337L-B-2-15/SB1	RMI
D494-10-001	LANDING GEAR CONTROL
DL1028M61-3	TRIM TAB ACTUATOR
DL3827M1-11	TRIM TAB ACTUATOR
DL3827M1-17	TRIM TAB ACTUATOR
DL3827M1-31	TRIM TAB ACTUATOR
DL3827M1-37	TRIM TAB ACTUATOR
DL3827M1-57	TRIM TAB ACTUATOR
DL3933M1-1	LINEAR ACTUATOR
DL3933M2-1	ACTUATOR
DL3933M2-11	LINEAR ACTUATOR
DL3933M3-1	ACTUATOR
DSF15461	FUEL TOTALIZER
DSF15492	FUEL FLOW IND
EM609-3	BLOWER ASSEMBLY
EM609-4	BLOWER ASSEMBLY
G5400-X()	LANDING LIGHT
G-9950-1	ROTATING BEACON
G9950-1	NAVIGATION LIGHT
G-9950-21	ROTATING BEACON
G-9950-36	ROTATING BEACON
G9950-5	BEACON
H301APM	ATTITUDE INDICATOR STANDBY
H301AZM1	GYRO HORIZON
H321AKM1	STNDBY HORIZON



Master List | Overhaul/Repair Capability

Part Number	Description
H321ALM1	INDICATOR
H341ADM2	STDBY GYRO HOR
H341AGM1	GYRO HORIZON
H341AMM1	GYRO HORIZON
H342AAM	ATTITUDE INDICATOR
HT4600	TRANS PRESS
HYLZ50434	TEMP CONTROL
HYLZ8882-1	TEMP CONTROL
IE 4626	IND HYD PRESS
IND-41	DME INDICATOR
IND-42A	IND DME
IND-42C	DME INDICATOR
JG298A4	EGT
JG298A5	EGT
KA-44B	ANTENNA, LOOP-SENSE
KEA-346	ENCODING ALTIMETER
KG-102A	DIRECTIONAL GYRO
KI-209	INDICATOR
KI-227	INDICATOR
KMA-24X	AUDIO PANEL
KR-87	RECEIVER, ADF
KT-76A	TRANSPONDER
KX-115	VHF NAVCOM RADIO SET
KX-155	VHF NAVCOM RADIO SET
LT-52A	LIGHT DIMMER POWER SUPPLY
M1035-0111-02	AUDIO CTL
M1035-0130-02	AUDIO CTL
M1035-AAAB-JLB2	AUDIO CTL
M1035-AAAB-JLM2	AUDIO CTL
M1035-CAAB-JLB2	AUDIO CTL
MGH159-200	INVERTER
MGH159-200A	INVERTER
MPEV3-011-8UK2B	PUMP
MPEV3-011-8UK2C	PUMP
MS28005-()	TRANSMITTER, PRESSURE
MS28005-2	RELAY
PC-250	STATIC INVERTER
PC-250-1C	STATIC INVERTER
PC350-1A	INVERTER
PS-401	DIMMER PWR SUP



Master List | Overhaul/Repair Capability

Part Number	Description
PW/0401KID/1	FUEL QUANTITY INDICATOR
PW0401KID1	FUEL FLOW IND
RCA15BK-4	DIRECTIONAL GYRO
RG11920-2	PUMP, FUEL BOOST
RR52000E	BOOST PUMP
SEDL-OC7E	DUAL BRAKE PRESS IND
SEL-OC19()	INDICATOR, TURBINE OUTLET TEMP
SETL-OC420G	INDICATOR
SLZ8826	VSI
SLZ9145	VERTICAL SPEED
SPC-38	INVERTER
SR-150A	INDICATOR, PRESS
SR-151A	INDICATOR, OIL PRESS
SR-152A	INDICATOR
SR-2AG	TORQUE INDICATOR
SR-2AM	TORQUE INDICATOR
SRDL-6D	DUAL PRESSURE
SRL-04L	OIL PRESSURE
SRL-C2C	TORQUE INDICATOR
SRL-C2F	TORQUE INDICATOR
SRL-C8C	FUEL FLOW INDICATOR
ST3A	TRANSMITTER, PRESS
ST62A	TRANSMITTER, PRES
SX7EL11	DC POWER PANEL
TDR-90	TRANSPONDER
VC-169	NAV CTL
VC-207	COM CTL
VC-297	COM CTL
VG-14A	VERTICAL GYRO
VHF-20B	VHF COMM TRANSCEIVER
VHF-22B	VHF COMM TRANSCEIVER
VIR-32	NAV RECEIVER
VR-1010-24-1A	REGULATOR, VOLTAGE
WXT-250B	RADAR R/T
XW20173M1	WIPER MOTOR
XW21121-256-XX-92	WINDSHIELD CONVERTER
XW21160-()	WINDSHIELD MOTOR