



ATR

OVERHAUL/REPAIR CAPABILITY LIST



ATR | Overhaul/Repair Capability

Part Number	Description
02R3045669	A02 FUEL NOZZLE
064-1023-00	TRANSCEIVER
066-1066-11	INTERROGATOR, DME
066-1066-20	INTERROGATOR, DME
066-1066-22	INTERROGATOR, DME
066-1066-24	INTERROGATOR, DME
066-1071-00	TRANSPONDER
071-1192-14	CONTROL, ATC
071-1210-08	CONTROL, ADF
071-1215-34	CONTROL, VHR
071-1216-20	CONTROL, VOL/ILS/DME
071-1234-00	ANTENNA
17M800	FLIGHT DATA RECORDER DIGITAL
17M800-251	FLIGHT DATA RECORDER DIGITAL
17M800-261	FLIGHT DATA RECORDER DIGITAL
22250F060200	CONTROLLER DIGITAL
22250F070200A	CONTROLLER DIGITAL
3034205	C01 FUEL NOZZLE
3034208	B01 FUEL NOZZLE
3034215	A01 FUEL NOZZLE
3034219	C02 FUEL NOZZLE
3034222	B02 FUEL NOZZLE
3034225	A02 FUEL NOZZLE
3034729	A01 FUEL NOZZLE
3034731	C01 FUEL NOZZLE
3034733	B01 FUEL NOZZLE
3035048	C01 FUEL NOZZLE
3035049	B01 FUEL NOZZLE
3035056	C02 FUEL NOZZLE
3035057	B02 FUEL NOZZLE
3037380(A)	A02 FUEL NOZZLE
3037382(A)	C01 FUEL NOZZLE
3037383(A)	B01 FUEL NOZZLE
3037384(A)	C02 FUEL NOZZLE
3037385(A)	B02 FUEL NOZZLE
3037422	B02 FUEL NOZZLE
3037423	B01 FUEL NOZZLE
3037425	C02 FUEL NOZZLE
3037426	C01 FUEL NOZZLE
3038098	C01 FUEL NOZZLE



ATR | Overhaul/Repair Capability

Part Number	Description
3038099	C02 FUEL NOZZLE
3038103	B01 FUEL NOZZLE
3038104	B02 FUEL NOZZLE
3038105	B02 FUEL NOZZLE
3038106	B01 FUEL NOZZLE
3038108	C02 FUEL NOZZLE
3038109	C01 FUEL NOZZLE
3038117	A01 FUEL NOZZLE
3038118	A02 FUEL NOZZLE
3038699	B02 FUEL NOZZLE
3038703	B01 FUEL NOZZLE
3038704	C02 FUEL NOZZLE
3038705	C01 FUEL NOZZLE
3038706	A01 FUEL NOZZLE
3038707	A02 FUEL NOZZLE
3038825	A01 FUEL NOZZLE
3038826	C01 FUEL NOZZLE
3038827	B01 FUEL NOZZLE
3039719	A01 FUEL NOZZLE
3039720	C01 FUEL NOZZLE
3039741	B01 FUEL NOZZLE
3039742	A01 FUEL NOZZLE
3039743	C01 FUEL NOZZLE
3039744	B01 FUEL NOZZLE
3039745	C01 FUEL NOZZLE
3039746	B01 FUEL NOZZLE
3039971	A02 FUEL NOZZLE
3039975	A01 FUEL NOZZLE
3040142	A01 FUEL NOZZLE
3040143	A01 FUEL NOZZLE
3040144	A01 FUEL NOZZLE
3040145	A01 FUEL NOZZLE
3040146	A02 FUEL NOZZLE
3045307	A02 FUEL NOZZLE
3045667	C02 FUEL NOZZLE
3045668	B02 FUEL NOZZLE
3045669	A02 FUEL NOZZLE
3045670	C01 FUEL NOZZLE
3045672	B01 FUEL NOZZLE
3045673	A01 FUEL NOZZLE



ATR | Overhaul/Repair Capability

Part Number	Description
3045692	A01 FUEL NOZZLE
3045776-01	B01 FUEL NOZZLE
3045778-01	B02 FUEL NOZZLE
3045781-01	C01 FUEL NOZZLE
3045783-01	C02 FUEL NOZZLE
3045786-01	A02 FUEL NOZZLE
3045788-01	A01 FUEL NOZZLE
3289704-1	VALVE SHUTOFF
3290104-1	VALVE BUTTERFLY
4013013-913	INDICATOR, VSI
4016341-906	ALTIMETER
4679-750-80-11	INDICATOR FLAP POSITION
4679-754-80-10	INDICATOR FLAP POSITION
4679-764-80-10	INDICATOR FLAP POSITION
4863-503-80-10	TRIM INDICATOR
49310-31	INDICATOR
5009982D	PUMP, ROTARY, POWER DRIVEN
5126-220-80-11	INDICATOR FUEL TEMP
5126-223-80-11	INDICATOR FUEL TEMP
520-3337-213	RMI
5677-406-80-13	INDICATOR OIL TEMP/PRESS
5677-409-80-10	INDICATOR OIL TEMP/PRESS
5677-420-80-10	INDICATOR OIL TEMP/PRESS
5677-750-80-12	INDICATOR TORQUE
5677-755-80-11	INDICATOR TORQUE
5677-756-80-10	INDICATOR TORQUE
5678-704-80-11	INDICATOR NH
5678-710-80-12	INDICATOR NP PROP
5678-713-80-10	INDICATOR NP PROP
5678-715-80-10	INDICATOR NP PROP
622-1270-001	TRANSPONDER
622-2362-001	RECEIVER ADF
622-2363-001	RECEIVER ADF
622-6137-001	RECEIVER VOR/ILS/MKR
622-6137-201	RECEIVER , VOR/ILS/MKR
622-6152-011	TRANSCEIVER VHF
622-6263-001	TRANSCEIVER , DME
622-6263-003	TRANSCEIVER , DME
622-6520-003	CONTROL VHF
622-6521-011	CONTROL, VOR/ILS/DME



ATR | Overhaul/Repair Capability

Part Number	Description
622-6522-003	CONTROL ADF
622-6523-007	CONTROL ATC DUAL
622-6590-001	CAD 62
624820-1	CONTROLLER TEMP
64050-662-1	AIRSPEED STANDBY
64141-362-1	ALTIMETER STANDBY
64141-372-1	ALTIMETER STANDBY
7002260-822	ACTUATOR ELEVATOR AILERON
7002260-922	ACTUATOR RUDDER
7002860-909	INDICATOR AIRSPEED
748-465-5	FUEL QUANTITY IND
748-522-2	INDICATOR FUEL QUANTITY
748-681-2	INDICATOR FUEL QUANTITY
748-682-1	INDICATOR FUEL QUANTITY REPEATER
748-682-2	INDICATOR FUEL QUANTITY
8260-121	DC STARTER GENERATOR
93A100-80	RECORDER COCK PIT VOICE
93A100-83	CVR
93A151-50	CONTROL CVR
9599-607-14562	TRANSCEIVER RADIO ALTIMETER
965-0476-088	COMPUTER, GPWS
C11VQ0012	PUMP FUEL ELECTRIC
C11VQ0013	PUMP FUEL ELECTRIC
C11VQ0020	PUMP FUEL ELECTRIC
FE193-002	ACTUATOR FLAP
FE231-000	ACTUATOR FLAP
FE231-001	ACTUATOR FLAP
FE231-002	ACTUATOR FLAP
FE231-003	ACTUATOR FLAP
H321BDMI	INDICATOR HORIZON STANDBY
TM512202	TRANSMITTER FUEL FLOW
TM512204	TRANSMITTER FUEL FLOW