



Bell 206

OVERHAUL/REPAIR CAPABILITY LIST



Bell 206 | Overhaul/Repair Capability

Part Number	Description
066-01072-0004	RECEIVER, ADF
066-1055-52	AUDIO PANEL
066-1055-71	AUDIO PANEL
066-1072-00	RECEIVER, ADF
066-3056-00	INDICATOR
066-3063-00	INDICATOR
069-1024-XX	VHF NAVCOM RADIO SET
071-1234-00	ANTENNA, LOOP-SENSE
10446N02W00	INDICATOR, TORQUEMETER
124.1013-X	INDICATOR, ENGINE OIL TEMP/PRESS
124.444-XX	INDICATOR, TURBINE OUTLET TEMP
206-062-200-1XX	STARTER-GENERATOR
206-062-627-003	GENERATOR/TACHOMETER
206-075-186-005	INDICATOR, LOADMETER
206-075-188-003	INDICATOR, TEMPERATURE
206-075-188-005	INDICATOR, XMSN OIL TEMP/PRESS
206-075-607-101	INDICATOR, ATTITUDE GYRO
206-075-677-1XX	INDICATOR, ENGINE OIL TEMP/PRESS
206-075-680-1XX	INDICATOR, TURBINE OUTLET TEMP
206-076-031-XXX	HYDRAULIC ACTUATOR
206-076-062-XXX	HYDRAULIC ACTUATOR
214-175-278-101	INDICATOR, ALTIMETER
23081-018	STARTER-GENERATOR
32005-023	GENERATOR/TACHOMETER
3940233-9003	INDICATOR, GAS PRODUCER
3942333-9006	INDICATOR, DUAL TACHOMETER
4300-6980L	INDICATOR, ATTITUDE GYRO
4300-8220L	INDICATOR, ATTITUDE GYRO
500DC	INDICATOR, ATTITUDE GYRO
51509-XXX	GCU
51530-XXX	GCU
51538-XXX	GCU
6501-3008	INDICATOR, GAS PRODUCER
8DJ150WAXX	INDICATOR, DUAL TACHOMETER
8DJ81WBS4	INDICATOR, GAS PRODUCER TACH
9009-3010	INDICATOR, TEMPERATURE
9009-3013	INDICATOR, XMSN OIL TEMP/PRESS
9016-3003	INDICATOR, LOADMETER
AW1842BA02	INDICATOR, TORQUEMETER
AW1842BA04	TORQUEMETER



Bell 206 | Overhaul/Repair Capability

Part Number	Description
AW1842BA05	TORQUEMETER
KA-44B	ANTENNA, LOOP-SENSE
KI-209	INDICATOR
KI-227	INDICATOR
KMA-24X	AUDIO PANEL
KR-87	RECEIVER, ADF
KT-76A	TRANSPONDER
KX-115	VHF NAVCOM RADIO SET
KX-155	VHF NAVCOM RADIO SET
RCA26BK-12	INDICATOR, ATTITUDE GYRO
SEL-OC19()	INDICATOR, TURBINE OUTLET TEMP