



CASA 212/235

OVERHAUL/REPAIR CAPABILITY LIST



CASA 212/235 | Overhaul/Repair Capability

Part Number	Description
064-1023-02	COMM TRANSCEIVER
066-1071-00	ATC TRANSPONDER
066-1078-04	NAV RECEIVER
066-3031-01	HEIGHT DEVIATION INDICATOR
066-3060-00	RMI
066-3062-008	ENCODING ALTIMETER
071-1210-04	ADF CONTROL
071-1215-35	VHF COMM CONTROL HEAD
071-1216-17	NAV CONTROL
071-1282-39	VHF CONTROL HEAD
10-0055-11	EMERGENCY LIGHT
124.560-1	TORQUE INDICATOR
124-1007	INDICATOR
1311-04	ANUC PANEL
1312-03	INDICATOR SWITCH
154BS101-1	MODULAR POWER SYSTEM
158410-3	OIL COOLER
162B243	IND OIL TEMP
162B48	AIR TEMP IND.
17M800-00	FLIGHT RECORDER
2101990-3	SRL CONTROLLER
2117804-3	CONTROL
217-05111	DE-ICE PRESS IND.
23079-005	D.C. STARTER/GENERATOR
2586261-1	DIGITAL CONTROL
2586333-3	DG
2589226-1	AMPLIFIER POWER SUPPLY
30-1033-19	ANTI-COLLISION LIGHT
30AH-1	ANGLE OF ATTACK INDICATOR
3103235-11	FUEL NOZZLE
3103235-8	FUEL NOZZLE
3103235-9	FUEL NOZZLE
319980-13-1	VALVE
35-62190-00XX	RELAY BOX
35-66176-0005	RELAY BOX
3D2372-021	VALVE REGULATOR
3E1389-10	PROP DE-ICE AMP METER
3E1964-3	TIMER, PROP DEICE
3E1964-4	DE-ICE TIMER
4001018-6108	ANT RADAR



CASA 212/235 | Overhaul/Repair Capability

Part Number	Description
40143	HYDRAULIC PUMP
418-04014	FUEL PRESS TRANS
4426-419-3	IND. FLAP
4426-425-00-00	FLAP INDICATOR
501-1533-51	ATTITUDE INDICATOR
504-0017-914	GYRO HORZ.
51509-002	GCU
51634-001	GCU
523029	EGT IND.
5506L-SG512	ALT ALERTER
5934PA1A86	ALTIMETER
5934PA-1A86	ALTIMETER
60-1321-1	POWER SUPPLY
60-3895-1	POWER SUPPLY
622-1032-001	RMI DRIVER
622-1270-001	TRANSPONDER
622-1334-001	VHF COMM TRANSCEIVER
622-1334-002	VHF COMM TRANSCEIVER
622-2362-001	ADF-60A
622-2504-001	ANT-318
622-2506-008	RMI-36
622-2855-001	ALT-55B
622-4022-001	WXT-250A
622-4565-001	332D-11T
622-5734-00X	SVO-65
622-5798-010	FCP-65
622-5799-104	MAP-65
622-6019-001	SSS-65
622-6136-002	DGS-65
622-6137-201	NAV RECEIVER
622-6153-001	VHF-21B
622-6332-001	ADS-65C
622-6520-007	CTL-22
622-6523-204	CONTROL
622-6524-003	IND DME
622-6614-001	CTL-230
622-6684-004	APP-65
622-7318-003	DME INDICATOR
622-8434-003	APC-65C
64050-661-1	AIR SPEED INDICATOR



CASA 212/235 | Overhaul/Repair Capability

Part Number	Description
64141-361-1	ALTIMETER STANDBY
650149-00	LINEAR ACTUATOR
650150-00	LINEAR ACTUATOR
650151-00	LINEAR ACTUATOR
650155-00	LINEAR ACTUATOR
650156-00	LINEAR ACTUATOR
650157-00	LINEAR ACTUATOR
7000622-901	VERT GYRO
7002260-922	SERVO
7002260-923	SERVO
7003032-913	SERVO
700GC01Y	PDU
7040	VERTICAL SPEED INDICATOR
710GC01Y	PDU
7G853	SWITCH
8055613-0203	RADAR INDICATOR
8160-530	STARTER GENERATOR
897331-2	TORQUE TRANS
9-231-07	TRANSDUCER
93A100-80	CVR
93A152-70	CVR CTL UNIT
9-464-62	INDICATOR
949594-X	TORQUE LIMITER
949596-X	TEMP CONTROLLER
A703B	RELAY
A712W	RELAY
A719W	RELAY
A770R	RELAY
A-770R	RELAY
A882DL	RELAY
ADF-60A	ADF RECEIVER
AG34	TACH GENERATOR
ALT-55B	RADIO ALTIMETER
B4515210-406	ENCODING ALTIMETER
B4515210-XXX	ALT.
BTI600-200A	AMP
BTI600-202M	BATTERY INDICATOR
C45501-10-002	ENCODING ALT
CTL-230	HF CONTROL
CTL-92	CONTROL



CASA 212/235 | Overhaul/Repair Capability

Part Number	Description
DL3933M1-1	LINEAR ACTUATOR
DL3933M2-1	ACTUATOR
DL3933M2-11	LINEAR ACTUATOR
DL3933M3-1	ACTUATOR
G-6325	PANEL
H301APM	ATTITUDE INDICATOR STANDBY
HT4600	TRANS PRESS
IE 4626	IND HYD PRESS
IND-42A	IND DME
IND-42C	DME INDICATOR
LT-52A	LIGHT DIMMER POWER SUPPLY
MPEV3-011-8UK2B	PUMP
MPEV3-011-8UK2C	PUMP
PC-250-1C	STATIC INVERTER
PC350-1A	INVERTER
PW/0401KID/1	FUEL QUANTITY INDICATOR
PW0401KID1	FUEL FLOW IND
RR52000E	BOOST PUMP
SETL-OC420G	INDICATOR
TDR-90	TRANSPONDER
TM400	SERVO
VHF-20B	VHF COMM TRANSCEIVER
VHF-22B	VHF COMM TRANSCEIVER
VIR-32	NAV RECEIVER
XW20173M1	WIPER MOTOR