



# Fairchild Metro

## OVERHAUL/REPAIR CAPABILITY LIST



Fairchild Metro | Overhaul/Repair Capability

<b>Part Number</b>	<b>Description</b>
066-1063-00	GLIDESLOPE RECEIVER
066-3034-12	INDICATOR
066-3042-00	RMI
066-3062-02	ALTIMERER
066-3114-XX	RADAR INDICATOR
066-4009-00	VOR/LOC CONVERTER
071-1192-22	TRANSPONDER CONTROL
071-1210-17	ADF CONTROL
071-1215-31	COM CONTROL
071-1276-22	TRANSPONDER CONTROL
071-1282-31	COM CONTROL
071-1283-26	NAV CONTROL
071-1378-00	RADAR R/T
10028-101	TORQUE TRANSDUCER
10028-102	TORQUE TRANSMITTER
10028-103	TORQUE TRANSMITTER
10028-104	TORQUE TRANSMITTER
10028-105	TORQUE TRANSMITTER
102340-10	CABIN PRESS CONTROLLER
103462-3	VALVE, DUMP
103464-7	VALVE, OUTFLOW
14-01321-00	MOTOR, WIPER
14-91326-03	MOTOR, WIPER
17-101	ALTITUDE WARNING
2-1203-3	BRAKE ASSY
22702-031	ENCODING ALTIMETER
22722-004	ALTITUDE ALERTER
22722-034	ALTITUDE ALERTER
23079-000-1	STARTER GENERATOR
26-86026-005	GEAR FLAP INDICATOR
270-2436-040	CONTROL
27-19025-007	AMMETER
27-19037-007	INDICATOR, AWI
27-19116-003	AMMETER
27-19116-005	AMMETER
27-19117-001	VOLMETER
27-19118-009	TRIMETER
27-19118-011	TRIMETER
27-19119-003	INDICATOR, FLAP POSITION
27-19121-3	HYDRAULIC PRESS IND



Fairchild Metro | Overhaul/Repair Capability

<b>Part Number</b>	<b>Description</b>
27-19122-001	INDICATOR, SUCTION
27-19123-005	INDICATOR, OXY PRESS
27-19124-3	PRESSURE IND
27-19133-005	INDICATOR, PITCH TRIM
27-19134-001	TURN AND BANK
27-19135-001	CLOCK
27-19136-001	VSI/RATE OF CLIMB
27-19137-023	AIRSPEED INDICATOR
27-19137-031	AIRSPEED INDCATOR
27-19139-001	VSI/RATE OF CLIMB
27-19144-005	INDICATOR, AWI
27-19144-007	INDICATOR, AWI
27-19144-009	AWI QTY GAUGE
27-19145-003	INDICATOR, CABIN AIR TEMP
27-19145-005	INDICATOR, CABIN AIR TEMP
27-19145-7	CABIN TEMP INDICATOR
27-19149-003	EGT IND
27-19157-003	%RPM INDICATOR
27-19158-007	%TORQUE INDICATOR
27-19160-001	OIL TEMP PRESS IND
27-19160-5	OIL TEMP PRESS IND
27-19161-1	FUEL PRESS IND
27-19167-001	TURN AND SLIP
27-19171-1	SAS INDICATOR
27-19193-001	AIRSPEED INDICATOR
27-19193-009	AIRSPEED INDICATOR
27-19193-027	AIRSPEED INDICATOR
27-19193-23	AIRSPEED INIDCATOR
27-19313-001	EGT INDICATOR
27-36053-001	ACTUATOR, FLAP
27-44049-027	SAS SERVO
27-66010-009	TORQUE IND
27-82135-003	INDICATOR , CABIN AIR TEMP
27-82168-007	CONTROL BOX PITCH
27-82174-073	ANNUNCIATOR PANEL
27-82174-085	ANNUNCIATOR PANEL
27-82174-109	ANNUNCIATOR PANEL
27-82174-111	ANNUNCIATOR PANEL
27-82174-121	ANNUNCIATOR PANEL
27-82174-151	ANNUNCIATOR PANEL



Fairchild Metro | Overhaul/Repair Capability

<b>Part Number</b>	<b>Description</b>
27-82174-173	ANNUNCIATOR PANEL
27-82176-053	CONTROL BOX, AWI
27-82176-071	CONTROL BOX, AWI
27-82181-019	CONTROL BOX, SAS
27-82181-023	CONTROL BOX, SAS
27-82186-033	INDICATOR, GEAR POSITION
27-82186-057	GEAR POSITION INDICATOR
27-82425-029	CONTROL BOX, FLAP
27-82425-031	CONTROL BOX, FLAP
27-82582-007	WIPER CONTROL
27-82719-007	ROTATING BEACON
300-14L	GYRO DIRECTIONAL
30-0467-5	STROBE LIGHT
300SG119Q	STARTER GENERATOR
305538-3	SWITCH, SPEED
3103235-11	FUEL NOZZLE
3103235-8	FUEL NOZZLE
3103235-9	FUEL NOZZLE
32-19023-001	SAS SERVO
32-19027-001	MODULE, FIRE LOGIC
3252013-1101	ALTIMETER, ENCODING
3252028-0101	ALTIMETER, ENCODING
33370945	MODULE, FIRE IND
392908-1-1	VALVE, REGULATING
3D1472	TIMER, WING DEICE
3E1964-1	TIMER PROP DEICE
4000874-8201	GYRO DIRECTIONAL
4000946-5201	RADAR INDICATOR
4000946-5202	RADAR INDICATOR
40-0100-1	ROTATING BEACON
4001018-6102	RADAR R/T
4001018-6104	RADAR R/T
4001018-6106	RADAR R/T
4001018-6108	RADAR R/T
4002963-901	RMI INDICATOR
4006451-0501	CAPSTAN
50284-001	DETECTOR, FAULT
504-0017-901	ARTIFICIAL HORIZON
504-0017-908	ARTIFICIAL HORIZON
504-0017-909	GYRO HORIZON



Fairchild Metro | Overhaul/Repair Capability

<b>Part Number</b>	<b>Description</b>
504-0017-916	ARTIFICIAL HORIZON
504-0017-921	ARTIFICIAL HORIZON
504-0021-901	HRI/ATTITUDE INDICATOR
504-0021-903	HRI/ATTITUDE INDICATOR
504-0021-908	GYRO HORIZON
504-0021-910	HRI/ATTITUDE INDICATOR
504-0030-911	GYRO HORIZON
509-0001-904	TURN AND BANK INDICATOR
51509-002	GENERATOR CONTROL UNIT
51509-002B	GENERATOR CONTROL UNIT
51509-002R	GENERATOR CONTROL UNIT
51539-005B	GENERATOR CONTROL UNIT
522-2638-001	HSI/COURSE INDICATOR
522-2638-006	HSI/COURSE INDICATOR
522-2638-007	HSI/COURSE INDICATOR
522-2638-009	COURSE INDICATOR
522-2644-011	SLAVING ACCESSORY
522-3241-000	GYRO, DIRECTIONAL
522-4945-001	FLUX DETECTOR, COMPASS
540-22722-034	ALTITUDE ALERTER
622-0555-003	RMI
622-0555-005	RMI
622-0876-001	NAV RECEIVER
622-0877-001	NAV RECEIVER
622-1204-004	RADIO ALTIMETER
622-1233-001	DME
622-1233-012	DME INDICATOR
622-1234-013	DME INDICATOR
622-1234-016	DME INDICATOR
622-1270-001	TRANSPONDER
622-1352-002	FLIGHT DIRECTOR
622-1879-001	COM
622-1879-002	COM
622-2362-001	ADF RECEIVER
622-2363-001	ADF ANTENNA
622-3594-005	FLIGHT DIRECTOR
622-4565-001	VERTICAL GYRO
622-4938-001	RMI INDICATOR
622-6137-001	NAV RECEIVER
622-6263-001	DME MEASURING EQUIPMENT



Fairchild Metro | Overhaul/Repair Capability

<b>Part Number</b>	<b>Description</b>
622-6389-001	COM
622-6389-002	COM
622-6520-008	CONTROL
622-6521-016	CONTROL
622-6522-008	CONTROL
622-6523-008	CONTROL
622-6524-003	DME IND
70-105-01	ALTITUDE ALERTER
709201-1	SWITCH ASSY
8095536-8101	RADAR RT
8095537-8101	RADAR IND
86000-1161	CLOCK
895380-SERIES	VALVE, FUEL BYPASS
93A100-80	CVR
949596-( )	LIMITER ASSY
9551A	TURN AND BANK
965-0476-088	GROUND PROX
965-0476-092	GROUND PROX
965-0476-093	GROUND PROX
980-6019-001	CVR
AG34	TACH GENERATOR
AG44	TACH GENERATOR
DSF15461	FUEL TOTALIZER
DSF15492	FUEL FLOW IND
HYLZ50434	TEMP CONTROL
HYLZ8882-1	TEMP CONTROL
M1035-01111-02	AUDIO CTL
M1035-0130-02	AUDIO CTL
M1035-AAAB-JLB2	AUDIO CTL
M1035-AAAB-JLM2	AUDIO CTL
M1035-CAAB-JLB2	AUDIO CTL
PS-401	DIMMER PWR SUP
SLZ8826	VSI
VC-169	NAV CTL
VC-207	COM CTL
VC-297	COM CTL