



Hawker 400

OVERHAUL/REPAIR CAPABILITY LIST



Hawker 400 | Overhaul/Repair Capability

| Part Number | Description |
|--------------------|---------------------------------|
| 23080-005 | STARTER GENERATOR |
| 23080-064 | STARTER GENERATOR |
| 23080-series | STARTER GENERATOR |
| 23091-002 | STARTER GENERATOR |
| 2587193-43 | DIRECTIONAL COMPASS |
| 4016341-906 | ENCODER |
| 4027170-904 | HORIZON IND |
| 501-1228-series | POWER SUPPER |
| 50284-003 | DC GROUND FAULT |
| 50284-003 | DC GROUND FAULT PROTECTION UNIT |
| 60-1321-1 | EMERGENCY LIGHT EXIT |
| 622-0876-001 | NAV RECEIVER |
| 622-1270-001 | TRANSPONDER |
| 622-1959-011 | REMOTE READOUT UNIT |
| 622-2362-001 | ADF RECEIVER |
| 622-2363-001 | ADF ANTENNA |
| 622-2855-series | RAD ALT RECEIVER |
| 622-3710-001 | ADF Antenna |
| 622-4022-001 | RADAR RD |
| 622-4160-017 | RADIO ALT IND |
| 622-6152-002 | VHF COMM RECEIVER |
| 622-6263-series | DME TRANSCEIVER |
| 622-6520-series | COMM CONTROL HEAD |
| 622-6521-series | NAV CONTROL HEAD |
| 622-6522-series | ADF COMM CONTROL HEAD |
| 622-6523-series | ATC CONTROL HEAD |
| 622-6524-series | DME INDICATOR |
| 622-7318-series | DME INDICATOR |
| 7000469-902 | HORIZONTAL INDICATOR |
| 7001179-954 | ATTITUDE INDICATOR |
| 7001182-902 | ATTITUDE INDICATOR |
| 7002493-902 | HORIZONTAL INDICATOR |
| 720-15900-series | CABIN TRIPLE INDICATOR |
| 93A100-80 | RECORDER |
| 93A100-83 | COCKPIT VOICE RECORDER |
| 93A151-30 | CONTROL UNIT |
| G-9950-1 | ROTATING BEACON |
| G-9950-21 | ROTATING BEACON |
| G-9950-36 | ROTATING BEACON |
| H341AGM1 | GYRO HORIZON |



Hawker 400 | Overhaul/Repair Capability

Part Number

Description

PC-250

STATIC INVERTER