



# King Air

## OVERHAUL/REPAIR CAPABILITY LIST



King Air | Overhaul/Repair Capability

<b>Part Number</b>	<b>Description</b>
060-0015-00	DIRECTIONAL GYRO
066-3046-01	HSI
071-01519-0101	RADAR R/T
100-0034-04	PROP TACH INDICATOR
101-384144-1	DISTRIBUTION VALVE
103598-2	OUTFLOW VALVE
103648-1	OUTFLOW VALVE
103648-13	OUTFLOW VALVE
103648-4	OUTFLOW VALVE
103648-5	OUTFLOW VALVE
103648-6	OUTFLOW VALVE
103648-7	OUTFLOW VALVE
130346-1	PRESSURIZATION CONTROL
130398-2	PRESSURIZATION CONTROL
1532-3B	DISTRIBUTION VALVE
1532-3C	DISTRUBUTION VALVE
1U149-001-6	HORIZON GYRO
23048-016	STARTER GENERATOR
23048-018	STARTER GENERATOR
23069-015	STARTER GENERATOR
23069-016	STARTER GENERATOR
23078-019	STARTER GENERATOR
23079-000-1	STARTER GENERATOR
23080-011	STARTER GENERATOR
23085-001	STARTER GENERATOR
2587193-43	DIRECTIONAL GYRO
328A-3G	SLAVING AMP
331A-3G	HSI
331A-6P	COURSE INDICATOR
332C-10	RMI
332D-11A	VERTICAL GYRO
332-D11T	VERTICAL GYRO
332E-4	DIRECTIONAL GYRO
334C-11	PRIMARY SERVO
334C-9A	PRIMARY SERVO
334D-6	TRIM SERVO
334D-6A	TRIM SERVO
5035P-P46	ENCODING ALTIMETER
509-0001-904	TURN/BANK INDICATOR
509-0001-910	TURN/BANK INDICATOR



King Air | Overhaul/Repair Capability

<b>Part Number</b>	<b>Description</b>
51530-001A	GENERATOR CONTROL UNIT
51530-007B	GENERATOR CONTROL UNIT
51538-001A	GENERATOR CONTROL UNIT
522-2638-006	HSI
522-2644-011	SLAVING GRYO
522-3241-000	DIRECTIONAL GRYO
562-805	VOLT LOAD METER
570-531	AC VOLT/FREQ METER
60-1750-3	POWER SUPPLY
622-0555-00X	RMI
622-0965-003	ELEVATOR SERVO
622-0965-00X	Trim Servo
622-1270-001	TRIM SERVO
622-2366-001	PRIMARY SERVO
622-2501-001	RADAR ANTENNA
622-2504-001	RADAR ANTENNA
622-2733-001	ELEVATOR SERVO
622-2733-002	ELEVATOR SERVO
622-3201-001	RADIO ALTIMETER
622-3260-001	TRIM SERVO
622-7337-001	RADAR R/T
787-6385-003	COURSE INDICATOR
792-6694-001	VERTICAL GYRO
8DJ81AAP1	PROP TACH INDICATOR
8DJ81BLB4	PROP TACH INDICATOR
8DJ81WBA4	TURBINE TACH INDICATOR
90-389001-3	STARTER GENERATOR
ALT-50A	RADIO ALTIMETER
ALT-55B	RADIO ALTIMETER
ANT-312	RADAR ANTENNA
ANT-318	RADAR ANTENNA
ART-2000	RADAR R/T
C-14A	DIRECTIONAL GYRO
EM609-3	BLOWER ASSEMBLY
EM609-4	BLOWER ASSEMBLY
EM8001	TACH GENERATOR
HYLZ50336-1	TEMP CONTROLLER
HYLZ51071	TEMP CONTROLLER
KEA-346	ENCODING ALTIMETER
KG-102A	DIRECTIONAL GYRO



King Air | Overhaul/Repair Capability

<b>Part Number</b>	<b>Description</b>
KI-525A	HIS
LT-52A	DIMMER
SR-2AG	TORQUE INDICATOR
SR-2AM	TORQUE INDICATOR
SRL-C2C	TORQUE INDICATOR
SRL-C2F	TORQUE INDICATOR
SRL-C8C	FUEL FLOW INDICATOR
TDR-90	TRANSPONDER
VR-1010-24-1A	VOLTAGE REGULATOR
WXT-250B	RADAR R/T